


1. Turn on the printer and open the top cover. (Photo 1)

This will bring the print head into the centre position, then remove the power plug.



2. Remove the left & Right Side Cover Panels. (Photo 2)

Use a flat head screw Driver in the position marked to release the claws. (Photo 3)

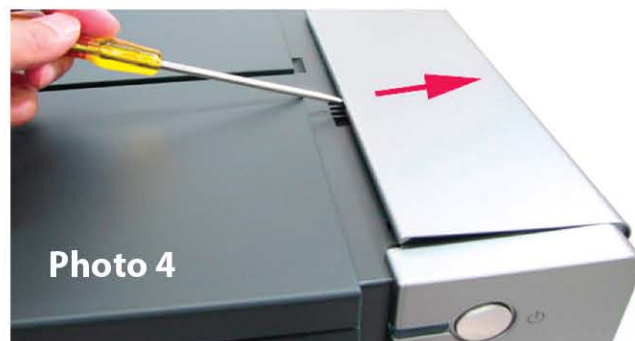



3. Gently push Left & Right Hand Panels downwards to remove. (Photo 4)



4. Locate the 4 claws on front panels (Photo 6) then lower the Paper tray to begin.



5. Use a screw driver to release the Claws on each Panel, (Photo 7 & 8 )

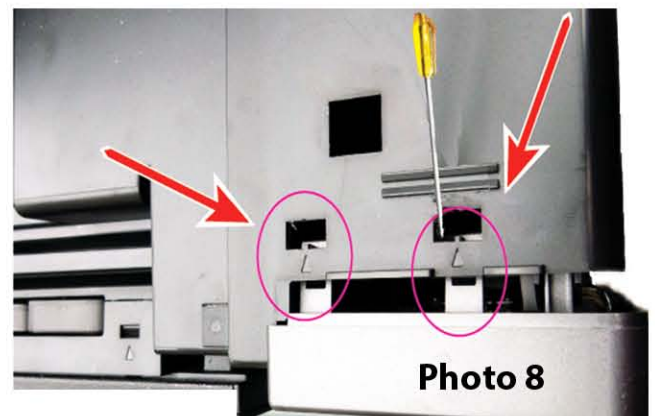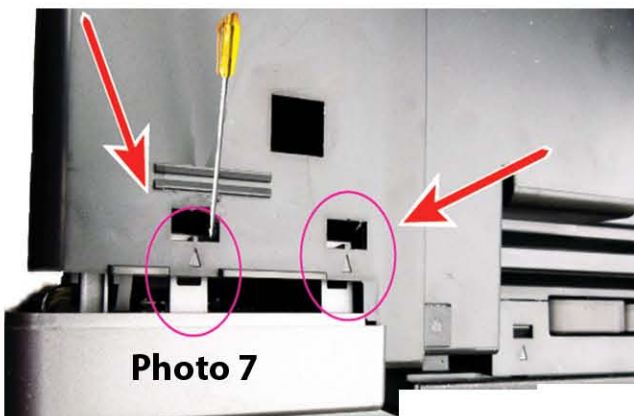

6. Then gently lift each Panels upwards to release them. (Photo 9)



7. Release the claws on both the left & Right sides (Photo 10)



8. Locate the 2 claws on the back and release them both. (Photo 11)

9. With both hands, first raise only the back of the case up 10 cm first. Then locate & release the claws on the front of the case (Photo 12).



Now it's easy to remove the whole case completely.

