

# **EPSON®**

## **Programming Guide**

**For**  
**6 Color**  
**EPSON Ink Jet Printer**

**L800**

**L801**

**(Level I)**

**All Rights Reserved.** This publication may only be used for the purposes of research and development of products and services enhancing, enabling, or facilitating existing and future products and services bearing the EPSON trademark, and for providing support to those engaging or intending to engage in such activities. All other uses are unauthorized. No part of this publication may be reproduced, stored in any retrieval system, or transmitted in any form or by any means without the prior written permission of Seiko Epson Corporation for any purpose other than the authorized users. No patent liability is assumed with respect to the use of the information contained within. While every precaution has been taken in the preparation of this information, Seiko Epson Corporation and its affiliates assume no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information presented within.

**EPSON and EPSON ESC/P are registered trademarks and EPSON ESC/P 2 is a trademark of SEIKO EPSON Corporation.**

**Copyright ©2012 by SEIKO EPSON Corporation, Nagano, Japan**

# TABLE OF CONTENTS:

CHAPTER 1: Introduction .....	5
1.1 Features.....	5
CHAPTER 2: PAPER TYPES AND SIZES Media Specification .....	6
2.1. Paper Sizes for this printer .....	6
2.1.1 Paper Types.....	6
2.2. Paper Size and Orientation.....	8
2.3. Printable Area .....	9
2.3.1 Printing Area (Standard).....	11
2.3.2 Printing Area (Zero margin/ Borderless).....	13
2.4 Enable paper size of zero margin printing.....	14
CHAPTER 3: Printing Option .....	15
3.1. Printing Quality .....	15
3.1.1. Print Modes .....	15
3.2 Recommended Settings for Color and Monochrome Printing.....	16
3.2.1. Recommended Setting Modes (Color&Black) for Japan .....	16
3.2.2 Recommended Setting Modes (Color&Black) <Windows/All regions except Japan>.....	17
3.2.3 Recommended Setting Modes (Color&Black) (Macintosh/All regions except Japan ) .....	19
CHAPTER 4: COMMAND SEQUENCE .....	20
4.1 Raster Graphics Modes .....	20
4.2 Command Transfer Procedure.....	21
4.2.1 Command transfer sequence for non-compressed and the run-length encoded compression modes .....	21
4.3 Limitations of Command Settings.....	23
4.4 Full Graphics mode (ESC . 0) and Run length encoded compressed mode (ESC . 1) .....	23
4.5 Raster Graphics Data Format .....	24
CHAPTER 5: INDIVIDUAL COMMAND SPECIFICATIONS .....	26
5.1.1 Exit Packet Mode .....	26
5.1.2 Initialize printer ESC @ .....	27
5.1.3 Line feed LF .....	28
5.1.4 Form feed FF.....	29
5.1.5 Carriage Return CR .....	30
5.1.6 Control paper loading/ejecting ESC EM n.....	31
5.1.7 Set absolute horizontal print position ESC \$ nL nH .....	32
5.1.8 Set absolute horizontal print position ESC ( \$ nL nH m1 m2 m3 m4.....	33
5.1.9 Set page length in defined unit ESC (C nL nH mL mH .....	34
5.1.10 Set page length in defined unit (extended) ESC (C nL nH m1 m2 m3 m4.....	35
5.1.11 Select graphics mode ESC (G nL nH m.....	36
5.1.12 Set unit (Set the number of 1/3600 inch units per programming value) ESC (U nL nH m .....	37
5.1.13 Set unit (extended) ESC (U nL nH P V H mL mH.....	38
5.1.14 Set absolute vertical print position ESC (V nL nH mL mH .....	39
5.1.15 Set absolute vertical print position (extended) ESC (V nL nH m1 m2 m3 m4.....	40
5.1.16 Set page format ESC (c nL nH tL tH bL bH .....	41
5.1.17 Set page format (extended) ESC (c nL nH t1 t2 t3 t4 b1 b2 b3 b4.....	42
5.1.18 Monochrome Mode / Color Mode Selection ESC ( K nL nH m n.....	43
5.1.19 Select MicroWeave printing mode ESC (i .....	44
5.1.20 Selects dot size ESC (e nL nH m d .....	45
5.1.21 Select color ESC (r nL nH m n .....	46
5.1.22 Set relative vertical print position ESC (v nL nH mL mH .....	47
5.1.23 Set relative vertical print position (extended) ESC (v nL nH m1 m2 m3 m4 .....	48
5.1.24 Print raster graphics ESC . c v h m nL nH d1...dk (c=0,1).....	49
5.1.25 Enter TIFF compressed mode ESC . 2 v h 1 0 0.....	51
5.1.25 Set paper dimensions ESC (S nL nH w1 w2 w3 w4 l1 l2 l3 l4.....	52
5.1.27 Set the raster image resolution ESC (D nL nH rL rH v h .....	53
5.1.28 Transfer Raster image ESC i r c b nL nH mL mH d1.....dk.....	54
5.1.29 Turn unidirectional mode on/off ESC U n .....	55
5.1.30 Set relative horizontal printing position ESC \ nL nH.....	56
5.1.31 Set relative horizontal print position ESC (/ nL nH n1 n2 m1 m2 .....	57
5.1.32 Select printing color ESC r n.....	58
5.1.33 Set Print method ID ESC (m n .....	59
CHAPTER 6: REMOTE MODE .....	60

6.1 Remote Mode Language Description .....	60
6.1.1 Enter Remote Mode (Remote Mode) ESC (R 08H 00H 00H "REMOTE1" .....	62
6.1.2 Load Power-On Default NVR into RAM (Remote Mode) "LD" 00H 00H.....	63
6.1.3 Set printer timer (Remote Mode) " TI" 08H 00H 00H YYYY MM DD hh mm ss .....	64
6.1.4 Set horizontal print position (Remote Mode) "FP" 03H 00H 00H m1 m2.....	65
6.1.5 Turn printer state reply on/off (Remote Mode) "ST" 02H 00H 00H m1 .....	66
6.1.6 Job name set "JH" nL nH 00H m1 m2 m3 m4 m5 <job name> .....	67
6.1.7 Start job "JS" nn 00H 00H <job name> m1 .....	68
6.1.8 End job "JE" 01H 00H 00H.....	68
6.1.9 Paper Feed Setup "SN" 01H 00H 00H.....	69
6.1.10 Select paper path "PP" 03H 00H 00H m1 m2.....	70
6.1.11 Select paper media "MP" 04H 00H 00H m1 m2 m3 .....	71
6.1.12 Select Duplex Printing "DP" 02H 00H 00H m1.....	74
6.1.13 User Setting "US" 03H 00H 00H m1 m2.....	75
6.1.14 Terminate Remote Mode (Remote Mode) ESC 00H 00H 00H .....	76
CHAPTER 7: STATUS REPLY CODE SPECIFICATION.....	77
7.1 Status code.....	78
7.2 Error code .....	78
7.3 Warning code .....	79
7.4 Paper path .....	80
7.5 Cleaning time information .....	80
7.6 Ink information.....	81
7.7 Loading path information .....	82
7.8 Cancel code.....	82
7.9 Job name Information .....	82
CHAPTER 8: Device ID .....	83

**Tables**

Table 1 Outline and feature of printer.....	5
Table 2 Coordinate Systems for a Single Sheet of Paper .....	10
Table 3 Printable Area Dimensions (Zero margin/ Borderless).....	13
Table 4 Command Sequence for the Conventional command method of graphics data transmission .....	21
Table 5 Command Sequence for the newer Method of ESC ( D command method of graphics data transmission .....	22

## CHAPTER 1: Introduction

This section of this handbook will provide a technical overview of L800,L801 to facilitate driver development.

### 1.1 Features

This printer is a narrow carriage of the four color inkjet printers introduced by EPSON. This printer's advanced EPSON Micro Piezo technology produces smaller ink droplets. This printer is an ideal business printer. They will deliver resumes, letterheads, reports, envelopes and presentations on all types of paper or transparent media. They are PC and Macintosh compatible and offer the advantage of USB connectivity.

This printer uses the original ink supply system.

This printer incorporates the following features:

- New Multi-Function Printer with card slots
- Highest resolution at 5760x1440dpi
- Ink supply system with outer ink tank
- Zero margin / Borderless printing for Faster Speed
- I/F : USB2.0 High speed

With this printer's bi-directional interfaces and EPSON's Remote Mode bi-directional printer control language, the host computer can obtain useful printer status information.

See Chapter 6 in this Handbook for further information concerning EPSON's Remote Mode printer control language.

Table 1 Outline and feature of printer

	Outline and feature
Print Head	90 nozzles x 6 for KCMYLCm Original individual ink cartridge.
Interface (s)	USB2.0
Printer Language	ESC/P Raster & Remote Mode
Resolution Max (dpi)	5760(h) x 1440(v)
Font	No support
Support Code table	No support
Ink Cartridge Type	*CMYKLCm

\* - CMYK,Lc,Lm refers to: Cyan, Magenta, Yellow, Black, Light Cyan, and Light Magenta

#### USB Endpoint

I/F No.	Endpoint Address	Endpoint Type	Linked Interface
0x00	0x04	Bulk Out	Printer
	0x05	Bulk In	

## CHAPTER 2: PAPER TYPES AND SIZES Media Specification

In addition to the standard plain paper and envelope sizes, EPSON provides special paper types in the following sizes:

### 2.1. Paper Sizes for this printer

#### 2.1.1 Paper Types

Paper Type		Size	US	EUR	ASIA/PAC	Japan
Plain paper	Cut sheets	A4	YES	YES	YES	YES
		A5	NO	YES	YES	YES
		A6	YES	YES	YES	YES
		B5	NO	YES	YES	YES
		Legal	YES	YES	YES	YES
		Letter	YES	YES	YES	YES
		Half-Letter	YES	NO	NO	NO
		User-defined	YES	YES	YES	YES
Premium Ink Jet Plain Paper	Cut sheets	A4	NO	YES	NO	NO
Premium Bright White Paper	Cut sheets	Letter	YES	NO	NO	NO
Bright White Inkjet Paper	Cut sheets	A4	NO	YES	YES	YES
Ultra Premium Glossy Photo Paper (EAI) Ultra Glossy Photo Paper (Euro/Asia)	Cut sheets	4x6in./100x150 mm	YES	YES	YES	YES
		L size	NO	NO	NO	YES
		2L size	YES	YES	NO	YES
		8x10in	YES	NO	NO	YES
		A4	YES	YES	YES	YES
Premium Photo Paper Glossy (EAI) Premium Glossy Photo Paper (Euro/Asia)	Cut sheets	Letter	YES	NO	NO	NO
		A4	YES	YES	YES	YES
		4x6in./100x150 mm	YES	YES	YES	YES
		8x10in	YES	NO	NO	YES
		L size	NO	NO	NO	YES
		2L / 5inx7in.	YES	YES	YES	YES
		HI-Vision	YES	YES	NO	YES
Card	NO	NO	NO	YES		
Premium Photo Paper Semigloss (EAI) Premium Semigloss Photo Paper (Euro/Asia)	Cut sheets	Letter	YES	NO	NO	NO
		A4	YES	YES	YES	YES
		L size	NO	NO	NO	YES
		2L size.	NO	NO	NO	YES
		4x6in./100x150mm	YES	YES	YES	NO
	Post card	Japanese Postcard	NO	NO	NO	YES
Photo Paper Glossy (EAI) Glossy Photo Paper (Euro/Asia)	Cut sheets	Letter	YES	NO	NO	NO
		A4	YES	YES	YES	YES
		2L size	NO	YES	NO	YES
		4x6in	YES	YES	YES	YES
		L size	NO	NO	NO	YES
Photo Paper (Euro/Asia)	Cut sheets	A4	NO	YES	YES	YES
		2L size	NO	YES	NO	NO
		4x6in	NO	YES	YES	NO
Premium Presentation Paper Matte (EAI) Matte Paper Heavy-weight (Euro/Asia)	Cut sheets	Letter	YES	NO	NO	NO
		8in. x 10in.	YES	NO	NO	NO
		A4	YES	YES	YES	YES

Paper Type		Size	US	EUR	ASIA/PAC	Japan
Double-Sided Matte Paper	Cut sheets	A4	NO	YES	YES	NO
		Letter	YES	NO	NO	NO
Presentation Paper Matte (for EAI) Photo Quality Ink Jet Paper	Cut sheets	A4	YES	YES	YES	YES
		Letter	YES	NO	NO	NO
スーパーファイン専用紙 ハガキ	Post card	Japanese Postcard	NO	NO	NO	YES
フォトシールフリーカット	Post card	Japanese Postcard	NO	NO	NO	YES
Photo Stickers 16	Cut sheets	A6	NO	NO	YES	YES
Photo Quality Self Adhesive Sheet	Cut sheets	A4	NO	NO	NO	YES
Ultra Premium Photo Paper Luster	Cut sheets	Letter	YES	NO	NO	NO
Post card	Post card	Japanese Postcard	NO	NO	NO	YES
		Japanese Double Postcard	NO	NO	NO	YES
		Japanese Inkjet Postcard	NO	NO	NO	YES
		郵政光沢ハガキ	NO	NO	NO	YES
Envelopes	Envelope	#10	YES	YES	YES	NO
		#DL	NO	YES	YES	NO
		#C6	NO	YES	YES	YES
		Japanese CHOKEI 3 Envelope	NO	NO	NO	YES
		Japanese CHOKEI 4 Envelope	NO	NO	NO	YES
		Japanese YOKEI 1 Envelope	NO	NO	NO	YES
		Japanese YOKEI 3 Envelope	NO	NO	NO	YES
		Japanese YOKEI 4 Envelope	NO	NO	NO	YES
CD-R/DVD-R Label	Tray Printing	φ=12cm	YES	YES	YES	YES
		φ=8cm	YES	YES	YES	YES

## 2.2. Paper Size and Orientation

Paper Type	Dimensions W x L	Orientation	
			
Legal	8.5in. x 14in.	Yes	No
Letter	8.5in. x 11in.	Yes	No
8x10in	203mm x 254mm	Yes	No
Half Letter	5.5 in. x 8.5 in.	Yes	No
A4	210 mm x 297 mm	Yes	No
A5	148 mm x 210 mm	Yes	No
A6 Index Card / A6	105 mm x 148 mm	Yes	No
B5	182 mm x 257 mm	Yes	No
Index card 5in. x8in.	5 in. x 8 in.	Yes	No
2L size / 5inx7in.	127x178 mm	Yes	No
Photo Paper 4 x 6 in./Photo card	113.6 mm x 164.4 mm*1)	Yes	No
Photo Paper 4x6in No Perforations	101.6 x 152.4mm	Yes	No
L size / 3.5inx5in.	89 x 127 mm	Yes	No
Japanese Postcard	100 mmx148 mm	Yes	No
Japanese Double Postcard	200 mmx148 mm	No	Yes
Envelope #10	9.5 in. x 4 .125 in.	Yes	No
Envelope #DL	220 mm x 110 mm	Yes	No
Envelope #C6	162 mm x 114 mm	Yes	No
Japanese CHOKEI 3 Envelope	120mm x 235mm *3)	Yes *4)	No
Japanese CHOKEI 4 Envelope	90mm x 205mm *3)	Yes *4)	No
Japanese YOKEI 1 Envelope	120mm x 176mm	Yes	No
Japanese YOKEI 3 Envelope	98mm x 148mm	Yes	No
Japanese YOKEI 4 Envelope	105mm x 235mm	Yes	No
Card	54mm x86 mm	Yes	No
HV wide size	102x181mm	Yes	No
User-defined	89 to 215.9 mm x 89 to 1117.6 mm (3.5 in. to 8.5 in. x 3.5 in. to 44 in.)	Yes	No

- 1) Each of the predetermined sizes is inserted only in the orientation indicated by "Yes" in the above table.
- 2) Printing at a rotation of 90° for each of the predetermined sizes must be carried out by the application.
- 3) \*1): Photo Paper 4in.x6in. :113.6 mm x 164.4 mm is logical size on printer driver. The actual paper-size is 113.6 mm x 175.4 mm.
- 4) \*2): Photo Paper 200 x 300 mm: Top margin non-printable area and Bottom margin non-printable area both length are 14mm.
- 5) \*3): Dimension indicates body size without flap.
- 6) \*4): Loading envelope, flap edge first, with printable side up.

### 2.3. Printable Area

For the purpose of printing, a sheet of paper is divided into two regions: the printable area and the non-printable area. These areas are defined as follows.

The printable area is the region within which the printing position can be set, and is the portion which is surrounded by the left margin position, the right margin position, the top margin position, and the bottom margin position.

The non-printable area is the region in which the printing position cannot be set, except for the right margin position, and is the region on the paper outside the printable area.

The margins, which determine the printable area, are defined as follows.

The left margin determines the non-printable strip appended to the left side of the printable area. The left margin position, which defines the margin boundary, is set upon the X axis. Moreover, the left margin position is considered as being included in the printable area.

The right margin determines the non-printable strip appended to the right side of the printable area. The right margin position, which defines the margin boundary, is set upon the X axis. Moreover, the right margin position is considered as being included in the non-printable area. However, it is possible to set the printing position to the right margin position.

The top margin determines the non-printable strip appended to the upper side of the printable area. The top margin position, which defines the margin boundary, is set upon the Y axis. Moreover, the top margin position is considered as being included in the printable area.

The bottom margin determines the non-printable strip appended to the lower side of the printable area. The bottom margin position, which defines the margin boundary, is set upon the Y axis. Moreover, the bottom margin position is considered as being included in the printable area.

The page management X-Y discrete coordinate system (hereinafter abbreviated as the page management coordinate system) which is used as the reference for setting the position of each of these margins, is the same as the position management coordinate system, except for the definition of the origin.

The position management coordinate system is the coordinate system for management of the printable area which is set within the page management coordinate system.

The position management coordinate system is set for each page separately.

The origin of the page management coordinate system is defined as follows.

The origin upon the X axis is set to the minimum printing position. The minimum printing position is the farthest leftward printing position that can physically be set upon the paper. The minimum printing position depends upon the horizontal position of the paper when it is inserted.


As for the origin upon the Y axis, for the first page directly after paper insertion, the upper edge of the paper is defined as the origin. For the second and subsequent pages, a position advanced by the page length from the origin on the page management coordinate system for the previous page is defined as the origin for the current page. Since in the case of single sheet paper only one page at a time can be inserted, the upper edge of the paper is always taken as the origin.

Here, page and page length are defined as follows.

A page means a unit region in the Y direction, which includes within it a single printable area. If the paper that is inserted is single sheet paper, only one page can be established upon each sheet. If the paper that is inserted is continuous paper, a plurality of pages can be established upon it.

The page length is the length in the Y direction of the page. If the paper that is inserted is single sheet paper, the length of the printing region in the Y direction from the top margin position to just before the bottom margin position is taken as the page length. If the paper that is inserted is continuous paper, the distance from the top margin position on the present page to the top margin position upon the next page is taken as the page length.

Table 2 Coordinate Systems for a Single Sheet of Paper

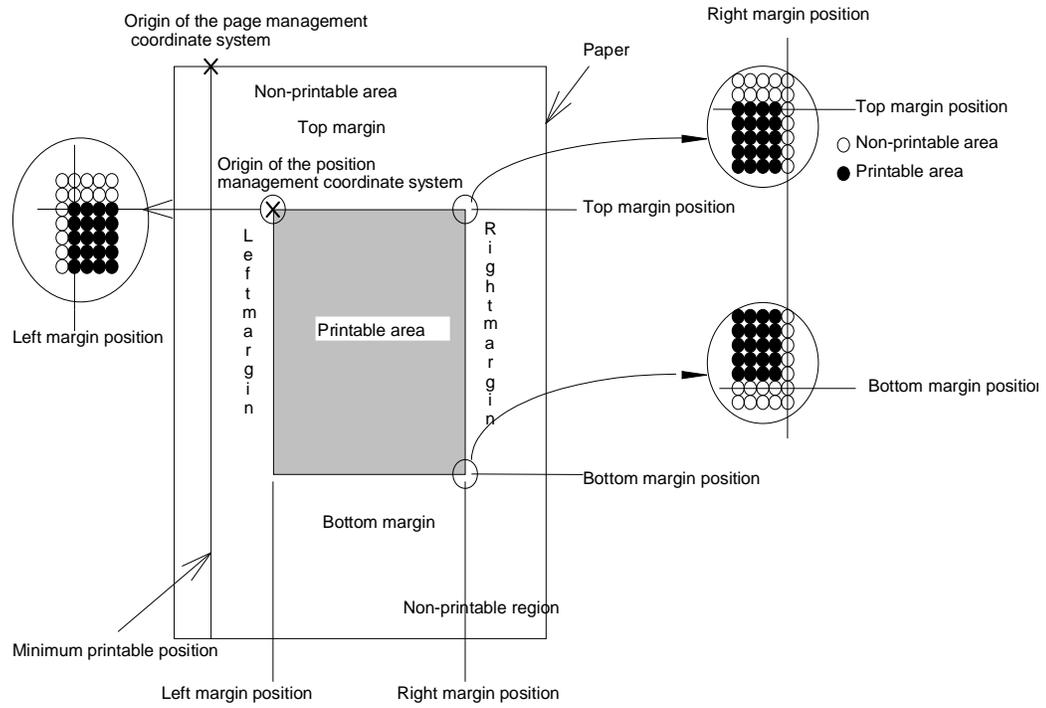

### 2.3.1 Printing Area (Standard)

The printable areas of various paper sizes on this printer is defined hereafter. Values are expressed in dot units, where 1 dot = 1/360 inch. As is displayed in the following diagram, printable area can be defined as follows:

A = the width of the unprintable left margin area

A (Centered) = the width of the unprintable left margin area when the printable area is centered

B = the width of the printable area

B (Centered) = the width of the printable area when the printable area is centered

C = the width of the unprintable right margin area


C (Centered) = the width of the unprintable right margin area when the printable area is centered

D = the length of the unprintable top margin area

D (Centered) = the length of the unprintable top margin area when the printable area is centered

E = the length of the printable area

E (Centered) = the length of the printable area when the printable area is centered

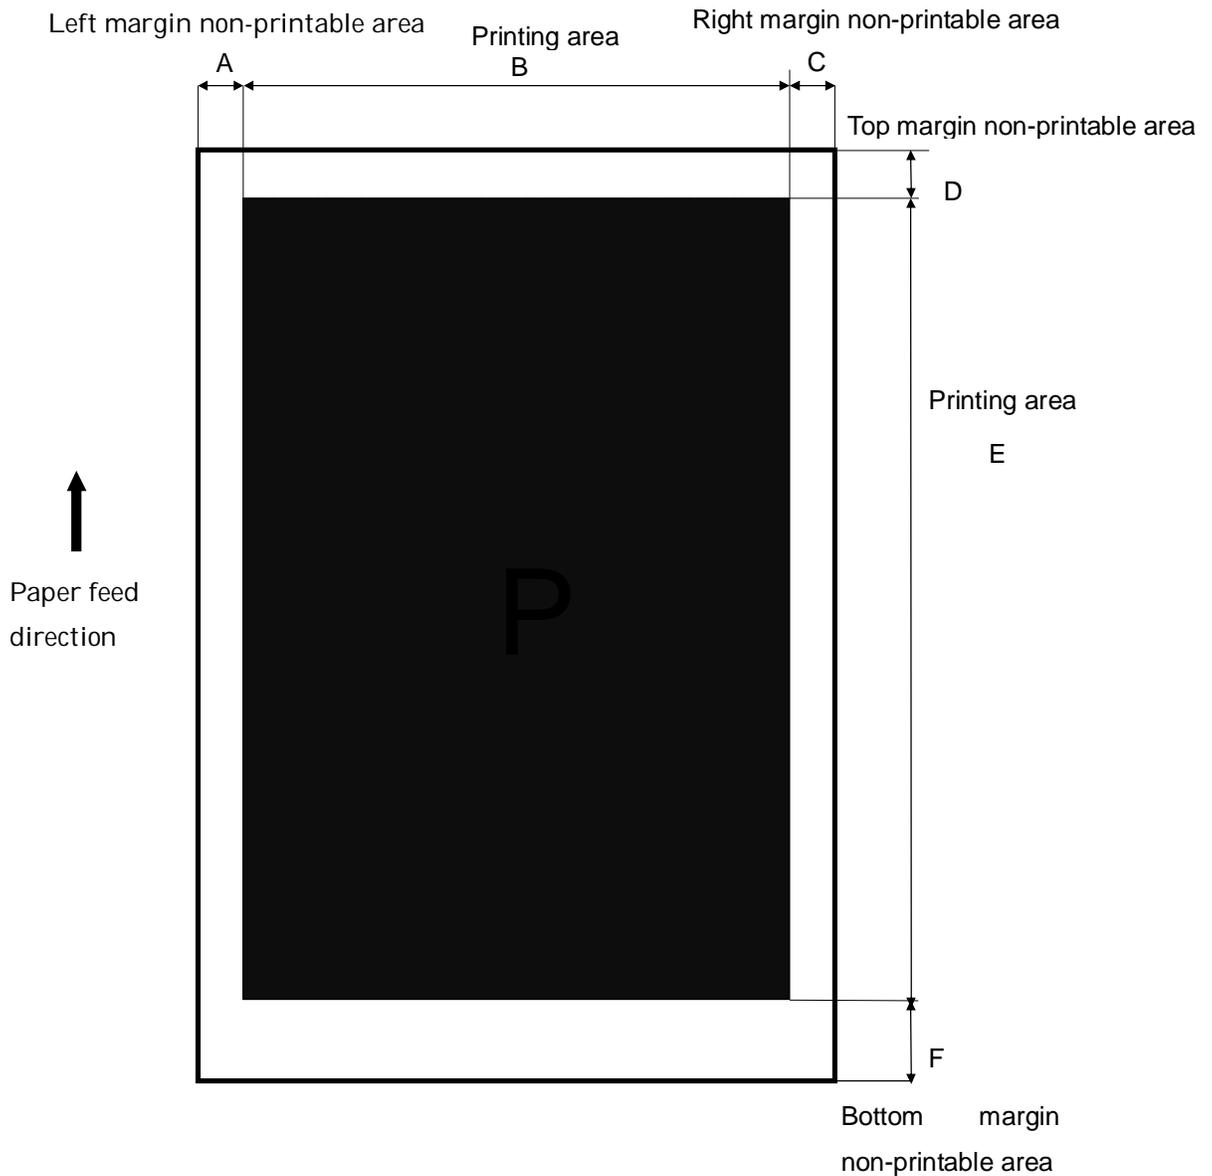

## Standard Sizes

The printing area is specified by A, B, D, and E.

	A/A(Centered)	B/B(Centered)	D/D(Centered)	E/E(Centered)
Legal	42/42	2976/2976	42/42	4715/4956
Letter	42/42	2976/2976	42/42	3635/3876
A4	42/42	2892/2892	42/42	3884/4125
A5	42/42	2014/2014	42/42	2651/2892
A6	42/42	1404/1404	42/42	1773/2014
B5	42/42	2496/2496	42/42	3318/3559
Half Letter	42/42	1896/1896	42/42	2735/2976
2L Size/ 5inx7in.	42/42	1716/1716	42/42	2197/2438
4x6in	42/42	1356/1356	42/42	1835/2076
L Size/ 3.5inx5in.	42/42	1177/1177	42/42	1475/1716
Index card 8in.x 10in.	42/42	2796/2796	42/42	3275/3516
Hi-Vision (4x7.11in)	42/42	1356/1356	42/42	2235/2476
Japanese Postcard	42/42	1333/1333	42/42	1773/2014
Japanese Double Postcard	42/42	2751/2751	42/42	1773/2014
Card	42/42	681/681	42/42	894/1135
#10 Envelope	42/42	1401/1401	42/42	3095/3095
DL Envelope	42/42	1475/1475	42/42	2793/2793
C6 Envelope	42/42	1532/1532	42/42	1971/1971
Japanese YOKEI 1	42/42	1617/1617	42/42	2169/2410
Japanese YOKEI 3	42/42	1305/1305	42/42	1773/2014
Japanese YOKEI 4	42/42	1404/1404	42/42	3006/3247
Japanese CHOKEI 3	42/42	1617/1617	42/42	3006/3247
Japanese CHOKEI 4	42/42	1192/1192	42/42	2581/2822

Unit [1/360inch]

### User-defined

With a paper type set by the user, a printing area defined by A, B, D, and E of at least the following number of dots are reserved.

	A/A(Centered)	B/B(Centered)	D/D(Centered)	E/E(Centered)
User-defined	42/42	max. 2976 / max. 2976	42/42	max. 15515 / max. 15756

### 2.3.2 Printing Area (Zero margin/ Borderless)

The printable areas of various paper sizes on this printer are defined hereafter. Values are expressed in dot units, where 1 dot = 1/360 inch. As is displayed in the following diagram, printable area can be defined as follows:

- A' = the width of the left override area
- B' = the width of the printable area
- C' = the width of the right override area
- D' = the length of the top override area
- E' = the length of the printable area
- F' = the length of the bottom override area
- I = the length of the top override area (unprintable area)

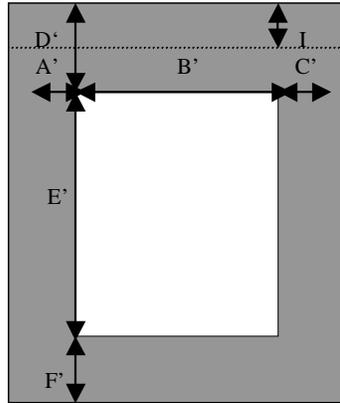


Table 3 Printable Area Dimensions (Zero margin/ Borderless)

The printing area is specified by A', B', D', and E'.

Paper	Size	US	EUR	ASIA/PAC	JPN	A'	B'	C'	D'	E'	F'	I
Cut Paper	A4	YES	YES	YES	YES	0	2976	0	0	4209	0	0
	Letter	YES	NO	NO	YES	0	3060	0	0	3960	0	0
	2L Size / 5x7in.	YES	YES	YES	YES	0	1800	0	0	2522	0	0
	L Size/3.5x5in.	YES	YES	YES	YES	0	1261	0	0	1800	0	0
	10x15cm/4x6in.	YES	YES	YES	YES	0	1440	0	0	2160	0	0
	Japanese Postcard	NO	NO	NO	YES	0	1417	0	0	2098	0	0
	8x10in.	YES	NO	NO	YES	0	2880	0	0	3600	0	0
	Card	NO	NO	NO	YES	0	765	0	0	1219	0	0
Hi-Vision	YES	YES	YES	YES	0	1440	0	0	2560	0	0	

1) Only Photo Paper, Matte Paper – Heavyweight, Card are able to achieve margin less printing

## 2.4 Enable paper size of zero margin printing

Media type	For USA	For EURO	For ASIA/PAC	For Japan
Ultra Glossy Photo Paper	A4, Letter, 8x10in, 4x6in, 5x7in	A4, 4x6in, 5x7in	A4, 4x6in	A4, 8x10in, 4x6in, 5x7in, L
Premium Glossy Photo Paper	A4, Letter, 8x10in, 5x7in, HI-Vision, 4x6in,	A4, 5x7in, HI-Vision, 4x6in,	A4, 5x7in, HI-Vision, 4x6in,	A4, 8x10in, 5x7in, 4x6in, L, HI-Vision, Card
Photo Paper Glossy (for EAI) Glossy Photo Paper (for Other)	Letter, A4, 5x7in, 4x6in	A4, 5x7in, 4x6in	A4, 4x6in	A4, 5x7in, 4x6in, L
Photo Paper	-	A4, 5x7in, 4x6in	A4, 4x6in	A4
Premium Semigloss Photo Paper	Letter, 4x6in	A4, 4x6in	A4, 4x6in	A4, L, 5x7in, Hagaki
Ultra Premium Photo Paper Luster	Letter	-	-	-
Matte Paper Heavy-Weight	A4, Letter, 8x10in.	A4	A4	A4
スーパーファイン専用ハガキ	-	-	-	Hagaki
ハガキ	-	-	-	Hagaki
IJ はがき	-	-	-	Hagaki
郵政光沢はがき	-	-	-	Hagaki

## CHAPTER 3: Printing Option

### 3.1. Printing Quality

This printer has the capability of printing at eleven different levels of quality.

#### 3.1.1. Print Modes

Print density			Dot size	Raster command density	ESC (D setting horizontal)	ESC (D setting vertical)	ESC i setting transfer raster image	ESC (e setting dot size)
Plain paper	Special Paper	(Horizontal x Vertical)		(H x V)	h / r	v / r	mH*256+mL	n2
Fast Draft	-	360dpi x 180dpi	Economy	360dpi x 90dpi 2bit	4/1440	16/1440	Max 90	10H
Draft	-	360dpi x 180dpi	Economy	360dpi x 90dpi 2bit	4/1440	16/1440	Max 90	10H
Normal	-	360dpi x 360dpi	MC2-1	360dpi x 90dpi 2bit	4/1440	16/1440	Max 90	31H
Fine	-	720dpi x 720dpi	MC1-1	720dpi x 90dpi 2bit	2/1440	16/1440	Max 90	21H
-	Photo Draft	720dpi x 360dpi	MC1-1	720dpi x 90dpi 2bit	2/1440	16/1440	Max 90	21H
-	Photo	720dpi x 720dpi	MC1-2	720dpi x 90dpi 2bit	2/1440	16/1440	Max 90	22H
-	Photo	720dpi x 540dpi	MC2-2	360dpi x 90dpi 2bit	4/1440	16/1440	Max 90	32H
-	Photo	720dpi x 720dpi	MC2-2	360dpi x 90dpi 2bit	4/1440	16/1440	Max 90	32H
-	Super Photo	5760dpi x 1440dpi	MC1-5	720dpi x 90dpi 2bit	2/1440	16/1440	Max 90	25H

## 3.2 Recommended Settings for Color and Monochrome Printing

Monochrome or Color printing mode depends on the ESC (K command). See the individual command specifications.

### 3.2.1. Recommended Setting Modes (Color&Black) for Japan

Media	Preset Name	Print quality	Resolution dpi	Bi-directional printing	Dot size	ESC (m)
普通紙	& 標準	Normal	360x360	ON	31H	22H
	きれい	Photo Fine	720x720	ON	21H	51H
EPSON スーパー ファイン紙	-	Photo	720x720	ON	32H	54H
郵便光沢ハガキ	& 標準	Photo	720x720	ON	22H	57H
	きれい	Super Photo	5760x1440	ON	25H	B0H
EPSON 写真用紙	& 標準	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	きれい	Super Photo	5760x1440	ON	25H	B2*3/B0*4
EPSON 写真用紙 クリスピー<高光沢 >	& 標準	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	きれい	Super Photo	5760x1440	ON	25H	B2*3/B0*4
EPSON フォトマット 紙	& 標準	Photo	720x720	ON	32H	54H
	きれい	Super Photo	5760x1440	ON	25H	B0H
EPSON 写真用紙 エントリー<光沢>	& 標準	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	きれい	Super Photo	5760x1440	ON	25H	B2*3/B0*4
EPSON フォト光沢 紙	& 標準	Photo	720x720	ON	22H	52H*1
					32H	54H*2
	きれい	Super Photo	5760x1440	ON	25H	B2*3/B0*4
郵便光沢ハガキ	-	Photo	720x720	ON	25H	57H
EPSON フォトシール	-	Photo	720x720	ON	32H	54H
CD/DVD レーベル	-	Super Photo	5760x1440	ON	25H	B1H
封筒	& 標準	Normal	360x360	OFF	31H	20H
	きれい	Photo Fine	720x720	OFF	21H	50H

& : default

\*1 Paper Size : L, Hagaki, 4x6in

\*2 Paper Size : Card, Name card, Sticker (postcard and A6), 5x7in, 8x10in, Letter, A4, HI-Vision

\*3 <L

\*4 >4x6

**3.2.2 Recommended Setting Modes (Color&Black) <Windows/All regions except Japan>**

Media	Preset Name	Print quality	Resolution dpi	Bi-directional printing	Dot size	ESC (m)
Plain papers	Draft	Draft1	360x180	ON	Eco	10H
	Text	Normal	360x360	ON	31H	22H
	Text&Image	Normal	360x360	ON	31H	22H
	Photo	Photo Fine	720x720	ON	21H	51H
	Best Photo	Photo Fine	720x720	ON	21H	51H
Ultra Premium Photo Paper Glossy (EAI) Ultra Glossy Photo Paper (Euro)	Draft	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Text	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Text&Image	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Photo	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Best Photo	Super Photo	5760x1440	ON	25H	B2*3/B0*4
	Premium Photo Paper Glossy (EAI) Premium Glossy Photo Paper (Euro)	Draft	Fine	720x360	ON	21H
720x720				ON	22H	52H*1
Text		Photo	720x720	ON	32H	54H*2
			720x720	ON	22H	52H*1
Text&Image		Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
Photo		Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
Best Photo		Super Photo	5760x1440	ON	25H	B2*3/B0*4
Ultra Premium Photo Paper Luster (EAI)		Draft	Fine	720x360	ON	21H
	720x720			ON	22H	52H*1
	Text	Photo	720x720	ON	32H	54H*2
			720x720	ON	22H	52H*1
	Text&Image	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Photo	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Best Photo	Super Photo	5760x1440	ON	25H	B2*3/B0*4
	Premium Photo Paper Semi-Gloss (EAI) Premium Semi-gloss Photo Paper (Euro)	Draft	Fine	720x360	ON	21H
720x720				ON	22H	52H*1
Text		Photo	720x720	ON	32H	54H*2
			720x720	ON	22H	52H*1
Text&Image		Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
Photo		Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
Best Photo		Super Photo	5760x1440	ON	25H	B2*3/B0*4
Photo Paper Glossy (EAI) Glossy Photo Paper (Euro)		Draft	Fine	720x360	ON	21H
	720x720			ON	22H	52H*1
	Text	Photo	720x720	ON	32H	54H*2
			720x720	ON	22H	52H*1
	Text&Image	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Photo	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Best Photo	Super Photo	5760x1440	ON	25H	B2*3/B0*4
	Photo Paper (Euro)	Draft	Fine	720x360	ON	21H
720x720				ON	22H	52H*1
Text		Photo	720x720	ON	32H	54H*2
			720x720	ON	22H	52H*1
Text&Image		Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2

	Photo	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Best Photo	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Premium Presentation paper Matte (EAI) Matte Paper - Heavyweight (Euro)	Draft	Photo	720x720	ON	32H	54H
	Text	Photo	720x720	ON	32H	54H
	Text&Image	Photo	720x720	ON	32H	54H
	Photo	Photo	720x720	ON	32H	54H
	Best Photo	Super Photo	5760x1440	ON	25H	B0H
Presentation Paper Matte (EAI) Photo Quality Ink Jet Paper (Euro)	Draft	Photo	720x720	ON	32H	54H
	Text	Photo	720x720	ON	32H	54H
	Text&Image	Photo	720x720	ON	32H	54H
	Photo	Photo	720x720	ON	32H	54H
	Best Photo	Photo	720x720	ON	32H	54H
Photo Stickers	Draft	Photo	720x720	ON	32H	54H
	Text	Photo	720x720	ON	32H	54H
	Text&Image	Photo	720x720	ON	32H	54H
	Photo	Photo	720x720	ON	32H	54H
	Best Photo	Photo	720x720	ON	32H	54H
CD/DVD	Draft	Super Photo	5760x1440	ON	25H	B1H
	Text	Super Photo	5760x1440	ON	25H	B1H
	Text&Image	Super Photo	5760x1440	ON	25H	B1H
	Photo	Super Photo	5760x1440	ON	25H	B1H
	Best Photo	Super Photo	5760x1440	ON	25H	B1H
Envelope	Draft	Normal	360x360	OFF	31H	20H
	Text	Normal	360x360	OFF	31H	20H
	Text&Image	Normal	360x360	OFF	31H	50H
	Photo	Photo Fine	720x720	OFF	21H	50H
	Best Photo	Photo Fine	720x720	OFF	21H	50H

\*1 Paper Size : L, Hagaki, 4x6in

\*2 Paper Size : Card, Name card, Sticker (postcard and A6), 5x7in, 8x10in, Letter, A4, HI-Vision

\*3 <L

\*4 >4x6

\*5 <4x6

\*6 >5x7i

### 3.2.3 Recommended Setting Modes (Color&Black) (Macintosh/All regions except Japan )

Media	Preset Name	Print quality	Resolution dpi	Bi-directional printing	Dot size	ESC (m)
Plain paper	& Speed	Normal	360x360	ON	31H	22H
	Quality	Photo Fine	720x720	ON	21H	51H
Ultra Premium Photo Paper Glossy (EAI) Ultra Glossy Photo Paper (Euro)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Premium Photo Paper Glossy (EAI) Premium Glossy Photo Paper (Euro)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Ultra Premium Photo Paper Luster (EAI)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Premium Photo Paper Semi-Gloss (EAI) Premium Semi-gloss Photo Paper (Euro)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Photo Paper Glossy(EAI) Glossy Photo Papers (Euro)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Photo Paper (Euro)	& Speed	Photo	720x720	ON	22H	52H*1
			720x720	ON	32H	54H*2
	Quality	Super Photo	5760x1440	ON	25H	B2*3/B0*4
Premium Presentation paper Matte (EAI) Matte Paper - Heavyweight (Euro)	& Speed	Photo	720x720	ON	32H	54H
	Quality	Super Photo	5760x1440	ON	25H	B0H
Presentation Paper Matte (EAI) Photo Quality Ink Jet Paper (Euro)	-	Photo	720x720	ON	32H	54H
Photo Stickers	-	Super Photo	720x720	ON	32H	54H
CD/DVD	-	Super Photo	5760x1440	ON	25H	B1H
Envelope	& Speed	Normal	360x360	OFF	31H	20H
	Quality	Photo Fine	720x720	OFF	21H	50H

& : default

\*1 Paper Size : L, Hagaki, 4x6in

\*2 Paper Size : Card, Name card, Sticker (postcard and A6), 5x7in, 8x10in, Letter, A4, HI-Vision

\*3 <L

\*4 >4x6

## CHAPTER 4: COMMAND SEQUENCE

### 4.1 Raster Graphics Modes

The following three modes are available for raster graphics commands:

- 1) Non-compressed mode - the print data is transferred without being compressed.  
Effective for printing data with a low compression ratio, such as photographs.
- 2) Run-length encoded mode - the print data is transmitted after run-length encoding compression.  
Effective for printing data such as graphs and figures, in which patterns appear repeatedly.
- 3) TIFF compressed mode - the print data is transferred after TIFF compression.  
Effective for printing data such as graphs and figures, in which patterns appear repeatedly.

## 4.2 Command Transfer Procedure

### 4.2.1 Command transfer sequence for non-compressed and the run-length encoded compression modes

The following are the basic commands used in non-compressed and run-length encoded modes. The commands are listed in order as they are sent:

Table 4 Command Sequence for the Conventional command method of graphics data transmission

Transfer cycle		Details of setting	Items set	Commands used
By document		1. Initialize settings	Exit Packet Mode	ESC SOH @EJL...
			Enter remote mode	ESC (R
			Set Printer Timer***	TI
			Job Start***	JS
			Set Job Name	JH
			Paper Feed Setup	SN
			Set paper path	PP
Set Media information	MI			
Set double paper print	DP			
Set user setting	US			
Other Remote Commands (optional)				
Exit Remote Mode	ESC 00H 00H 00H			
1.2 Initialize printer	ESC @			
1.3 Select graphics mode	ESC ( G			
1.4 Set unit	ESC ( U			
2. Printing method control			2.1 Turn unidirectional mode on/off	ESC U
			2.2 Select MicroWeave printing mode	ESC ( i
			2.3 Select Monochrome or Color	ESC ( K
			2.4 Select Ink Drop Size	ESC ( e
3. Set print format (single sheet)			3.1 Set page format	ESC ( c or ESC ( C
			3.2 Set paper dimension	ESC ( S
			3.3 Set print method ID	ESC ( m
By page	By raster	4. Set vertical position	4.1 Set vertical print position	ESC ( V or ESC ( v
		5. Transfer data	5.1 Select color	ESC ( r
5.2 Set horizontal print position	ESC ( / or ESC ( \$			
5.3 Print raster graphics: * repeat above for each color	ESC ( .			
		6. Form feed	6.1 Form feed	FF
		7. Terminate printing	7.1 Initialize printer	ESC @
			7.2 Enter Remote Mode	ESC (R
			Load NVR Settings	LD
			Job End	JE
			Exit Remote Mode	ESC 00H 00H 00H

\*Parameters and data format of non-compressed vs. run-length encoded transmissions will differ with the Print Raster Graphics command.

\*\*In the case of micro weave print mode, ESC ACK command is inserted only when the plural passes are specified with no paper feed.

\*\*\* It is necessary to send the TI command before the JS command.

Table 5 Command Sequence for the newer Method of ESC ( D command method of graphics data transmission

Transfer cycle		Details of setting	Items set	Commands used
By document		1. Initialize settings	Exit Packet Mode Enter remote mode Set Printer Timer** Job Start** Set Job Name Paper Feed Setup Other Remote Commands (optional) Exit Remote Mode 1.2 Initialize printer 1.3 Select graphics mode Set unit	ESC SOH @EJL... ESC (R TI JS JH SN ESC 00H 00H 00H ESC @ ESC ( G ESC ( U
		2. Printing method control	2.1 Turn unidirectional mode on/off 2.2 Select MicroWeave print mode 2.3 Select Monochrome or Color 2.4 Select Ink Drop Size 2.5 Set resolution of Raster mode	ESC U ESC ( I ESC ( K ESC ( e ESC ( D
		3. Set print format (single sheet)	3.1 Set page format 3.2 Set paper dimension 3.3 Set Print method	ESC ( c or ESC( C ESC ( S ESC ( m
By page	By raster	4. Set vertical position	4.1 Set vertical print position	ESC ( V or ESC ( v
		5. Transfer data	5.1 Set horizontal print position  5.2 Print raster graphics: repeat above for each color	ESC(/ or ESC (\$  ESC i
		6. Form feed	6.1 Form feed	FF
		7. Terminate printing	7.1 Initialize printer 7.2 Enter Remote Mode Load NVR Settings Job End Exit Remote Mode	ESC @ ESC (R LD JE ESC 00H 00H 00H

\*In the case of micro weave print mode, ESC ACK command is inserted only when the plural passes are specified with no paper feed.

\*\* It is necessary to send the TI command before the JS command.

### 4.3 Limitations of Command Settings

- “Exit Packet Mode”, in many circumstances, command **MUST** be called before any communication or printing can occur on any I/F. This command is described in the “Individual Command Specifications”.
- The “Set absolute vertical print position ESC (V)” and “Set relative vertical print position ESC (v)” commands will set the starting print position of the subsequent data to be printed, including whatever white space may exist within that data. To avoid confusion, it is recommended not to embed large null or white space in the data.
- All null raster data should not be sent to the printer.
- For detailed specifications of the commands that are transmitted, refer to CHAPTER 5, "Individual Command Specifications".

### 4.4 Full Graphics mode (ESC . 0) and Run length encoded compressed mode (ESC . 1)

The send data has to keep the rule because of making sure of mechanical throughput.


When the loop counter of data is 3 or less than 3 : Use Full Graphics mode (ESC . 0)

When the loop counter of data is 4 or more than 4 : Use Run length encoded compressed mode (ESC . 1)

### 4.5 Raster Graphics Data Format

The driver must generate appropriate data taking into account the nozzle positions in the printer are uniquely vertically aligned.

This printer's nozzle constitution and the color order are shown below.

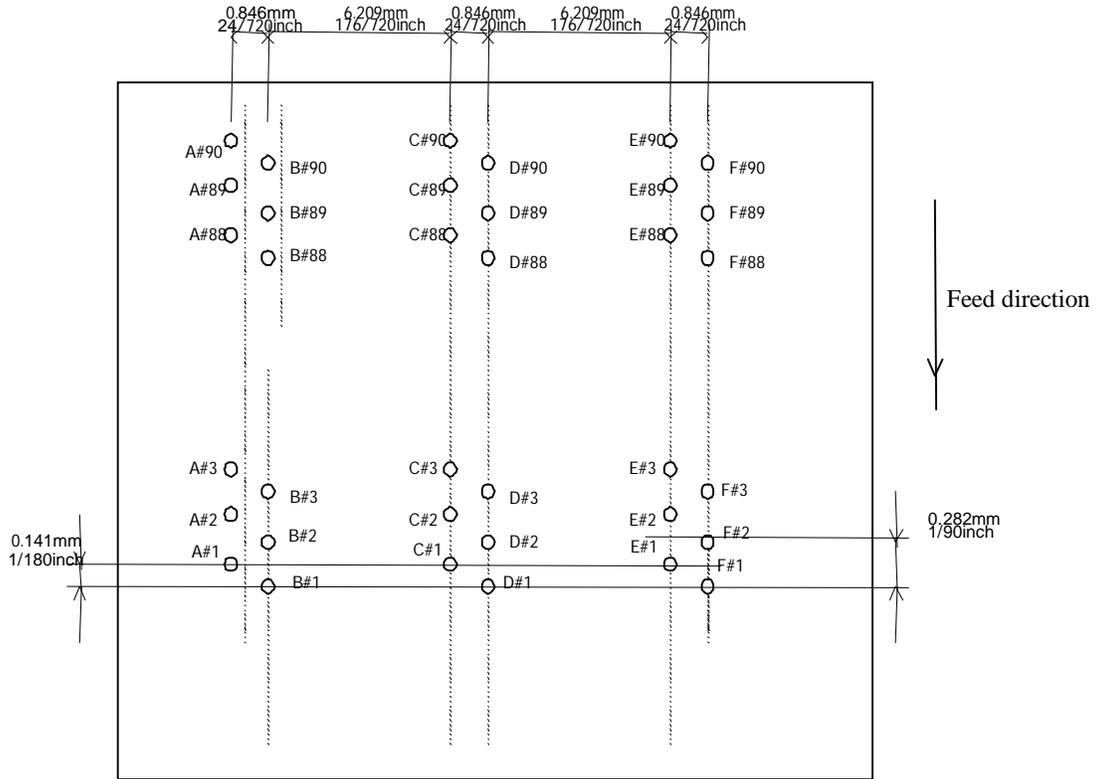

	A column	B column	C column	D column	E column	F Column
Head nozzle order	Black	Yellow	Light Magenta	Light Cyan	Cyan	Magenta

For this printer, the data must be configured bearing in mind the vertical positions of the nozzles. EPSON printers are generally having print heads with nozzles for each color structured in the same vertical position, but this printer head takes the Color nozzle as a reference point. On the basis of Black and Light Magenta and Cyan nozzles 1/180 inch lower. When transferring data to the printer, these offsets must be taken into consideration.

Correspondence table of raster command row and the nozzle are shown below.

Row ("raster") number	Yellow/Light Cyan/Magenta Vertical position	Black/Light Magenta/Cyan Vertical position
1	$\alpha$ (base position)	$\alpha+1/180$ inch
2	$\alpha+2/180$ inch	$\alpha+3/180$ inch
3	$\alpha+4/180$ inch	$\alpha+5/180$ inch
4	$\alpha+6/180$ inch	$\alpha+7/180$ inch
5	$\alpha+8/180$ inch	$\alpha+9/180$ inch
6	$\alpha+10/180$ inch	$\alpha+11/180$ inch
7	$\alpha+12/180$ inch	$\alpha+13/180$ inch
8	$\alpha+14/180$ inch	$\alpha+15/180$ inch
9	$\alpha+16/180$ inch	$\alpha+17/180$ inch
...	...	...
81	$\alpha+160/180$ inch	$\alpha+161/180$ inch
82	$\alpha+162/180$ inch	$\alpha+163/180$ inch
83	$\alpha+164/180$ inch	$\alpha+165/180$ inch
84	$\alpha+166/180$ inch	$\alpha+167/180$ inch
85	$\alpha+168/180$ inch	$\alpha+169/180$ inch
86	$\alpha+170/180$ inch	$\alpha+171/180$ inch
87	$\alpha+172/180$ inch	$\alpha+173/180$ inch
88	$\alpha+174/180$ inch	$\alpha+175/180$ inch
89	$\alpha+176/180$ inch	$\alpha+177/180$ inch
90	$\alpha+178/180$ inch	$\alpha+179/180$ inch

# CHAPTER 5: INDIVIDUAL COMMAND SPECIFICATIONS

## 5.1.1 Exit Packet Mode

00H 00H 00H ESC 01H “@EJL” 20H “1284.4” 0AH “@EJL” 20H 20H 20H 20H 20H 0AH

Ver 1.00

---

[Name]	EPSON packet mode exit command (special command)	[Setting]
[Format]	00H,00H,00H,1BH,01H,40H,45H,4AH,4CH,20H,31H,32H,38H,34H,2EH,34H,0AH, 40H,45H4AH,4CH,20H,20H,20H,20H,20H,0AH	
[Range of Definition]	---	
[Function]	1) If the system is in packet mode, this command must be sent before any other commands can be successfully transferred over either USB or Parallel Port, including the basic ESC @ printer initialization command. 2) Packet communication protocol (EPSON packet mode) is cancelled. The command for entering packet mode and the commands utilized in packet mode are EPSON proprietary.	
[Initial State]	The initial state of the printer, unused and unopened, new from the EPSON box, may or may not be in packet mode. However, once the printer has received any print job from any other source (especially a Windows OS printer driver) it will most likely be in packet mode. If the printer is in EPSON packet mode; no typical USB and possibly Parallel Port transmissions can be received or recognized.	
[Related Commands]	---	

### 5.1.2 Initialize printer ESC @

#### ESC @

Ver 1.00

---

[Name]	Initialize printer	[Setting]
[Format]	1BH, 40H	
[Range of Definition]	-	
[Function]	<ol style="list-style-type: none"><li>1) The various settings are returned to their initial values.</li><li>2) The Y axis origin of the page management coordinate system and the position management coordinate system are set to the current printing position on the Y axis.</li><li>3) The present printing position on the X axis is set to the origin upon the X axis.</li><li>4) Text mode printing is selected.</li></ol>	
[Initial State]	-	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. The settings for all commands are returned to their initial states.</p> <p>[Setting] Commands that change the effects of this command. None</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command. None</p>	

### 5.1.3 Line feed LF

LF

Ver. 1.00

---

[Name]	Line feed	[Operation]
[Format]	0AH	
[Range of Definition]	-	
[Function]	<ol style="list-style-type: none"><li>1) Advances the current printing position in the positive Y direction by an amount equal to the current line separation amount. Sets the printing position in the X direction to the starting point (the left margin position) on the X axis of the position management coordinate system.</li><li>2) If this command sets the Y direction printing position into the non-printable area, then the page is ejected. The position management coordinate system is set to the next page. In addition the printing position is set to the origin of the position management coordinate system for the new page.</li></ol>	
[Initial State]	-	
[Related Commands]	Related Command [Setting]s that apply an effect. None Related Command [Setting]s that receive an effect. None Related Command [Operation]s that apply an effect. None Related Commands [Operation]s that receive an effect. The amount of advancement per line is set by the ESC + command. The non-printable area is set by the ESC (c command). The amount of advancement per line, the non-printable area, and the left margin position are reset to their initial state by the ESC @ and ESC (G commands).	

### 5.1.4 Form feed FF

**FF**

**Ver 1.00**

---

[Name]	Form feed	[Operation]
[Format]	0CH	
[Range of Definition]	-	
[Function]	1) The contents of the print buffer are printed. The current page is ejected. The position management coordinate system is set to the next page. The printing position is set to the origin of the position management coordinate system for the new page. 2) This command is ignored if the printer is out of paper.	
[Initial State]	-	
[Related Commands]	[Setting] Commands whose settings are affected by this command. None [Setting] Commands that change the effects of this command. None [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. The page length is set by the ESC (C command). The page length and the left margin position are reset to their initial states by the ESC @ and ESC (G commands).	

### 5.1.5 Carriage Return CR

**CR**

**Ver 1.00**

---

[Name]	Carriage Return	[Operation]
[Format]	ODH	
[Range of Definition]	-	
[Function]	1) The printing position in the X direction is set to the origin (the left margin) on the X axis of the position management coordinate system.	
[Initial State]	-	
[Related Commands]		
	[Setting] Commands whose settings are affected by this command.	
	None	
	[Setting] Commands that change the effects of this command.	
	None	
	[Operation] Commands whose functionality is affected by this command.	
	None	
	[Operation] Commands that change the effects of this command.	
	None	

## 5.1.6 Control paper loading/ejecting ESC EM n

### ESC EM n

Ver 1.00

---

[Name]	Control paper loading/ejecting	[Setting]
[Format]	1BH, 19H, n	
[Range of Definition]	n=31H, 52H (="1", "R")	
[Function]	<ol style="list-style-type: none"><li>1) The CSF (cut sheet feeder) receives the following commands, according to the value of n: n=31H select bin 1 for the next paper feeding, and for every paper fed thereafter n=52H eject paper</li><li>2) If n has any value other than the above, this command is ignored.</li><li>3) The ESC EM "R" will only eject paper fed from the CSF. If the paper being fed was not fed by the CSF, this command is ignored.</li><li>4) Bin selection settings apply to the next and subsequent paper feedings.</li><li>5) After the ESC EM "R" command ejects the paper, the printing position in the X direction is set to the origin on the X axis.</li></ol>	
[Initial State]	-	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. None</p> <p>[Setting] Commands that change the effects of this command. Bin selection is reset to its initial state by the ESC @ command.</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command. None</p>	

### 5.1.7 Set absolute horizontal print position ESC \$ nL nH

ESC \$ nL nH

Ver 1.00

[Name]	Set absolute horizontal print position	[Operation]																																												
[Format]	1BH, 24H, nL, nH																																													
[Range of Definition]	0 <= n <= 47616 (where nL <= FFH; nH <= BAH)																																													
[Function]	<p>1) The printing position in the positive X direction is set to: The maximum Absolute Horizontal Position (AHP) is 209.973mm or (29760/3600 =) 8.267 inches.</p> <p>From the [ESC (U) and the [ESC (U) Extended Command</p> <table border="1"> <thead> <tr> <th>AHP units</th> <th>AHP Value</th> <th>AHP Resolution</th> <th>Abs Horizontal Print Position Value</th> </tr> </thead> <tbody> <tr> <td>_*</td> <td>0.002mm( 1/5760 inch)</td> <td>5760*</td> <td>0 &lt;= n &lt;= 47616</td> </tr> <tr> <td>_*</td> <td>0.004mm( 1/2880 inch)</td> <td>2880*</td> <td>0 &lt;= n &lt;= 23808</td> </tr> <tr> <td>_*</td> <td>0.008mm( 1/1440 inch)</td> <td>1440*</td> <td>0 &lt;= n &lt;= 11904</td> </tr> <tr> <td>5</td> <td>0.035mm( 5/3600 inch)</td> <td>720*</td> <td>0 &lt;= n &lt;= 5952</td> </tr> <tr> <td>10</td> <td>0.071mm(10/3600 inch)</td> <td>360*</td> <td>0 &lt;= n &lt;= 2976</td> </tr> <tr> <td>20</td> <td>0.141mm(20/3600 inch)</td> <td>180*</td> <td>0 &lt;= n &lt;= 1488</td> </tr> <tr> <td>30</td> <td>0.211mm(30/3600 inch)</td> <td>120*</td> <td>0 &lt;= n &lt;= 992</td> </tr> <tr> <td>40</td> <td>0.282mm(40/3600 inch)</td> <td>90*</td> <td>0 &lt;= n &lt;= 744</td> </tr> <tr> <td>50</td> <td>0.353mm(50/3600 inch)</td> <td>72</td> <td>0 &lt;= n &lt;= 595</td> </tr> <tr> <td>60</td> <td>0.423mm(60/3600 inch)</td> <td>60</td> <td>0 &lt;= n &lt;= 496</td> </tr> </tbody> </table> <p>*See [ESC (U) Extended command for APH Units for these resolution in general when using [ESC (U)</p> $0 \leq \frac{(256 \times nH + nL) \times 3600}{AHP\_units} \leq (29760/3600)\text{inch}$ <p>in general when using [ESC (U) Extended</p> $0 \leq \frac{(256 \times nH + nL) \times \text{Base\_Unit}(m)}{AHP\_units} \leq (29760/3600)\text{inch}$ <p>from the origin (the left margin position) on the X axis of the position management coordinate system.</p> <p>2) If the Absolute Horizontal Position specified is passed the right margin position, then this command is ignored.</p>	AHP units	AHP Value	AHP Resolution	Abs Horizontal Print Position Value	_*	0.002mm( 1/5760 inch)	5760*	0 <= n <= 47616	_*	0.004mm( 1/2880 inch)	2880*	0 <= n <= 23808	_*	0.008mm( 1/1440 inch)	1440*	0 <= n <= 11904	5	0.035mm( 5/3600 inch)	720*	0 <= n <= 5952	10	0.071mm(10/3600 inch)	360*	0 <= n <= 2976	20	0.141mm(20/3600 inch)	180*	0 <= n <= 1488	30	0.211mm(30/3600 inch)	120*	0 <= n <= 992	40	0.282mm(40/3600 inch)	90*	0 <= n <= 744	50	0.353mm(50/3600 inch)	72	0 <= n <= 595	60	0.423mm(60/3600 inch)	60	0 <= n <= 496	
AHP units	AHP Value	AHP Resolution	Abs Horizontal Print Position Value																																											
_*	0.002mm( 1/5760 inch)	5760*	0 <= n <= 47616																																											
_*	0.004mm( 1/2880 inch)	2880*	0 <= n <= 23808																																											
_*	0.008mm( 1/1440 inch)	1440*	0 <= n <= 11904																																											
5	0.035mm( 5/3600 inch)	720*	0 <= n <= 5952																																											
10	0.071mm(10/3600 inch)	360*	0 <= n <= 2976																																											
20	0.141mm(20/3600 inch)	180*	0 <= n <= 1488																																											
30	0.211mm(30/3600 inch)	120*	0 <= n <= 992																																											
40	0.282mm(40/3600 inch)	90*	0 <= n <= 744																																											
50	0.353mm(50/3600 inch)	72	0 <= n <= 595																																											
60	0.423mm(60/3600 inch)	60	0 <= n <= 496																																											
[Initial State]	-																																													
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. None</p> <p>[Setting] Commands that change the effects of this command. None</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command. [ESC (U) sets the Absolute Horizontal Position units/value. [ESC (G) initialize the Absolute Horizontal Position units/value. [ESC @] initialize units for page and position values.</p>																																													

## 5.1.8 Set absolute horizontal print position ESC ( \$ nL nH m1 m2 m3 m4

ESC ( \$ nL nH m1 m2 m3 m4

Ver 1.00

[Name]	Set absolute horizontal print position	[Operation]																																												
[Format]	1BH, 28H, 24H, nL, nH, m1, m2, m3, m4																																													
[Range of Definition]	nL = 04H, nH = 00H (number of bytes to follow) 0 <= m <= 47616																																													
[Function]	<p>1) The printing position in the positive X direction is set to: The maximum Absolute Horizontal Position (AHP) is 209.973mm or (29760/3600 =) 8.267 inches. Position Count (c) is given by: <math>c = m4 * 256 * 256 * 256 + m3 * 256 * 256 + m2 * 256 + m1</math></p> <p>From the [ESC (U)] and the [ESC (U)] Extended Command</p> <table border="1"> <thead> <tr> <th>AHP units</th> <th>AHP Value</th> <th>AHP Resolution</th> <th>Abs Horizontal Print Position Value</th> </tr> </thead> <tbody> <tr> <td>—*</td> <td>0.002mm( 1/5760 inch)</td> <td>5760*</td> <td>0 &lt;= n &lt;= 47616</td> </tr> <tr> <td>—*</td> <td>0.004mm( 1/2880 inch)</td> <td>2880*</td> <td>0 &lt;= n &lt;= 23808</td> </tr> <tr> <td>—*</td> <td>0.008mm( 1/1440 inch)</td> <td>1440*</td> <td>0 &lt;= n &lt;= 11904</td> </tr> <tr> <td>5</td> <td>0.035mm( 5/3600 inch)</td> <td>720*</td> <td>0 &lt;= n &lt;= 5952</td> </tr> <tr> <td>10</td> <td>0.071mm(10/3600 inch)</td> <td>360*</td> <td>0 &lt;= n &lt;= 2976</td> </tr> <tr> <td>20</td> <td>0.141mm(20/3600 inch)</td> <td>180*</td> <td>0 &lt;= n &lt;= 1488</td> </tr> <tr> <td>30</td> <td>0.211mm(30/3600 inch)</td> <td>120*</td> <td>0 &lt;= n &lt;= 992</td> </tr> <tr> <td>40</td> <td>0.282mm(40/3600 inch)</td> <td>90*</td> <td>0 &lt;= n &lt;= 744</td> </tr> <tr> <td>50</td> <td>0.353mm(50/3600 inch)</td> <td>72</td> <td>0 &lt;= n &lt;= 595</td> </tr> <tr> <td>60</td> <td>0.423mm(60/3600 inch)</td> <td>60</td> <td>0 &lt;= n &lt;= 496</td> </tr> </tbody> </table> <p>*See [ESC (U)] Extended command for APH Units for these resolution in general when using [ESC (U)]  <math display="block">0 \leq \frac{(256 \times nH + nL) \times 3600}{AHP\_units} \leq (29760/3600)inch</math> in general when using [ESC (U)] Extended  <math display="block">0 \leq \frac{(256 \times nH + nL) \times Base\_Unit(m)}{AHP\_units} \leq (29760/3600)inch</math> from the origin (the left margin position) on the X axis of the position management coordinate system.</p> <p>2) If the Absolute Horizontal Position specified is passed the right margin position, then this command is ignored.</p>	AHP units	AHP Value	AHP Resolution	Abs Horizontal Print Position Value	—*	0.002mm( 1/5760 inch)	5760*	0 <= n <= 47616	—*	0.004mm( 1/2880 inch)	2880*	0 <= n <= 23808	—*	0.008mm( 1/1440 inch)	1440*	0 <= n <= 11904	5	0.035mm( 5/3600 inch)	720*	0 <= n <= 5952	10	0.071mm(10/3600 inch)	360*	0 <= n <= 2976	20	0.141mm(20/3600 inch)	180*	0 <= n <= 1488	30	0.211mm(30/3600 inch)	120*	0 <= n <= 992	40	0.282mm(40/3600 inch)	90*	0 <= n <= 744	50	0.353mm(50/3600 inch)	72	0 <= n <= 595	60	0.423mm(60/3600 inch)	60	0 <= n <= 496	
AHP units	AHP Value	AHP Resolution	Abs Horizontal Print Position Value																																											
—*	0.002mm( 1/5760 inch)	5760*	0 <= n <= 47616																																											
—*	0.004mm( 1/2880 inch)	2880*	0 <= n <= 23808																																											
—*	0.008mm( 1/1440 inch)	1440*	0 <= n <= 11904																																											
5	0.035mm( 5/3600 inch)	720*	0 <= n <= 5952																																											
10	0.071mm(10/3600 inch)	360*	0 <= n <= 2976																																											
20	0.141mm(20/3600 inch)	180*	0 <= n <= 1488																																											
30	0.211mm(30/3600 inch)	120*	0 <= n <= 992																																											
40	0.282mm(40/3600 inch)	90*	0 <= n <= 744																																											
50	0.353mm(50/3600 inch)	72	0 <= n <= 595																																											
60	0.423mm(60/3600 inch)	60	0 <= n <= 496																																											
[Initial State]	-																																													
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. None</p> <p>[Setting] Commands that change the effects of this command. None</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command.  [ESC (U)] sets the Absolute Horizontal Position units/value.  [ESC (G)] initialize the Absolute Horizontal Position units/value.  [ESC @] initialize units for page and position values.</p>																																													

### 5.1.9 Set page length in defined unit ESC (C nL nH mL mH

#### ESC (C nL nH mL mH

Ver 1.00

---

[Name]	Set page length in defined unit	[Operation]
[Format]	1BH, 28H, 43H, nL, nH, mL, mH	
[Range of Definition]	nL=02H, nH=00H $0 < ((mH \times 256) + mL) \times (\text{page management value}) \leq 1117.6\text{mm}(44 \text{ inches})$	
[Function]	<ol style="list-style-type: none"><li>1) The page length is set to <math>((mH \times 256) + mL) \times (\text{page management value}) * 25.4\text{mm}</math>.</li><li>2) If the formula applied values of mH and mL produces a value outside the Range of Definition, this command is ignored.</li><li>3) The Y axis origin of the page management coordinate systems and position management coordinate systems are set to the current Y direction printing position. The origin on the X axis is not changed at this time.</li><li>4) The top margin position is set to the origin on the Y axis. The bottom margin position is set to the position positive Y page length from the top margin.</li></ol>	
[Initial State]	The page length is set to 558.8mm(22 inches).	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. The top and bottom margin position settings set by the ESC (c commands are cleared.</p> <p>[Setting] Commands that change the effects of this command. The page length, the page management value, and the top and bottom margin positions are reset to their initial states by the ESC @ and ESC (G commands.</p> <p>[Operation] Commands whose functionality is affected by this command. New page processing by the FF command is affected (the amount of movement is changed). New lines generated by the LF command that go outside the printable area are affected. Processing by the ESC (v command is affected. Processing by the ESC (V command is affected.</p> <p>[Operation] Commands that change the effects of this command. The page management value is set by the ESC (U command.</p>	

### 5.1.10 Set page length in defined unit (extended) ESC (C nL nH m1 m2 m3 m4

ESC (C nL nH m1 m2 m3 m4

Ver 2.00

ESC (C nL nH m1 m2 m3 m4		[Operation]
[Name]	Set page length in defined unit(extended)	
[Format]	1BH, 28H, 43H, nL, nH, m1, m2, m3, m4	
[Range of Definition]	nL=04H, nH=00H $0 \leq (m4 * 1000000H + m3 * 10000H + m2 * 100H + m1) * 1440 / (\text{defined value}) \leq 1FFFFFFFH$	
[Function]	<ol style="list-style-type: none"> <li>1) The page length is set to <math>((mH \times 256) + mL) \times (\text{page management value}) * 25.4\text{mm}</math>.</li> <li>2) If the formula applied values of mH and mL produces a value outside the Range of Definition, this command is ignored.</li> <li>3) The Y axis origin of the page management coordinate systems and position management coordinate systems are set to the current Y direction printing position. The origin on the X axis is not changed at this time.</li> <li>4) The top margin position is set to the origin on the Y axis. The bottom margin position is set to the position positive Y page length from the top margin.</li> </ol>	
[Initial State]	The page length is set to 558.8mm(22 inches).	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command.            The top and bottom margin position settings set by the ESC (c commands are cleared.</p> <p>[Setting] Commands that change the effects of this command.            The page length, the page management value, and the top and bottom margin positions are reset to their initial states by the ESC @ and ESC (G commands.</p> <p>[Operation] Commands whose functionality is affected by this command.            New page processing by the FF command is affected (the amount of movement is changed).            New lines generated by the LF command that go outside the printable area are affected.            Processing by the ESC (v command is affected.            Processing by the ESC (V command is affected.</p> <p>[Operation] Commands that change the effects of this command.            The page management value is set by the ESC (U command.</p>	

### 5.1.11 Select graphics mode ESC (G nL nH m

#### ESC (G nL nH m

Ver 1.00

---

[Name]	Select graphics mode	[Operation]
[Format]	1BH, 28H, 47H, nL, nH, m	
[Range of Definition]	nL=01H, nH=00H m=01H or 31H	
[Function]	1) Shifts to graphics mode. 2) If m has any value other than the above, this command is ignored. 3) Printing of lines up to the present line is started, and the printer waits until the printing is completed. 4) The various settings are the same as when the power is turned on. 5) The page management coordinate system and the position management coordinate system are set by taking the printing position in the Y direction at the time of setting as the origin on the Y axis. 6) The printing position in the X direction is set to the origin upon the X axis. 7) The microweave printing mode selection command becomes effective.	
[Initial State]	Character mode.	
[Related Commands]	[Setting] Commands whose settings are affected by this command. Default character mode selection made by the ESC @ command is changed. [Setting] Commands that change the effects of this command. The graphics mode is cancelled by the ESC @ command. [Operation] Commands whose functionality is affected by this command. In graphics mode, only the following commands are valid: LF        ESC (C FF        ESC (\ CR        ESC (U ESC EM    ESC (V ESC.      ESC (r ESC +     ESC (v ESC @     ESC \ ESC (c    ESC (\$ ESC (i    ESC (r ESC (K    ESC (U ESC (e	
	[Operation] Commands that change the effects of this command. None	

### 5.1.12 Set unit (Set the number of 1/3600 inch units per programming value) ESC (U nL nH m

**ESC (U nL nH m**

**Ver 1.00**

[Name]	Set unit (Set the number of 1/3600 inch units per programming value)	[Setting]
[Format]	1BH, 28H, 55H, nL, nH, m	
[Range of Definition]	nL=01H, nH=00H m=05H, 0AH, 14H, 1EH, 28H, 32H, 3CH (units 0.0071mm(1/3600 inch)) (=5, 10, 20, 30, 40, 50, 60)	

[Function]

- 1) Set the number of 0.0071mm(1/3600 inch) units for each of the following values:  
Relative horizontal position setting value  
Absolute horizontal position setting value  
Relative vertical position setting value  
Absolute vertical position setting value  
Page management value
- 2) If nL or nH has a value other than the above, then the following (256 x nH + nL) bytes of data are received, and this command terminates.
- 3) If m has a value other than the above, this command is ignored.

[Initial State]	VALUE	m	units	length of value
	Page management value:	0AH	10	0.071mm(1/360 inch)
	Relative horizontal position setting value:	14H	20	0.141mm(1/180 inch)
	Absolute horizontal position setting value:	3CH	60	0.423mm(1/60 inch)
	Relative vertical position setting value:	0AH	10	0.071mm(1/360 inch)
	Absolute vertical position setting value:	0AH	10	0.071mm(1/360 inch)

[Related Commands]

[Setting] Commands whose settings are affected by this command.

None

[Setting] Commands that change the effects of this command.

None

[Operation] Commands whose functionality is affected by this command.

The units for the relative horizontal position setting value used by the ESC \ command are set.

The units for the absolute horizontal position setting value used by the ESC \$ command are set.

The units for the relative vertical position setting value used by the ESC (v command are set.

The units for the absolute vertical position setting value used by the ESC (V command are set.

The units for the "unit" unit page length specification value used by the ESC (C command are set.

The units for the page format specification value used by the ESC (c command are set.

[Operation] Commands that change the effects of this command.

All values are restored to their initial state to by the ESC @ command.

### 5.1.13 Set unit (extended) ESC (U nL nH P V H mL mH

#### ESC (U nL nH P V H mL mH

Ver 2.00

---

[Name]	Set unit(extended)	[Setting]
[Format]	1BH, 28H, 55H, nL, nH, P, V, H, mL mH	
[Range of Definition]	nL=05H, nH=00H P=( mH*256 + mL ) = 90, 120, 180, 360, 720, 1440, 2880 V=( mH*256 + mL ) = 90, 120, 180, 360, 720, 1440, 2880, 5760 H=( mH*256 + mL ) = 90, 120, 180, 360, 720, 1440, 2880, 5760	
[Function]	1) Set the following standard values in units of b / ( mH * 256 + mL ) * 25.4mm : The H parameter determines the horizontal position setting units The V parameter determines the vertical position setting units The P parameter determines the page management units 2) This Command is only effective in graphics mode.	
[Initial State]	Page management value: 0.071mm(1/360 inch) Relative horizontal position setting value: 0.141mm(1/180 inch) units Absolute horizontal position setting value: 0.423mm(1/60 inch) units Relative vertical position setting value: 0.071mm(1/360 inch) units Absolute vertical position setting value: 0.071mm(1/360 inch) units	
[Related Commands]	[Setting] Commands whose settings are affected by this command. None [Setting] Commands that change the effects of this command. None [Operation] Commands whose functionality is affected by this command. The relative horizontal position setting value used by the ESC \ and ESC( / commands is set. The absolute horizontal position setting value used by the ESC \$ and ESC( \$ commands is set. The relative vertical position setting value used by the ESC (v command is set. The absolute vertical position setting value used the ESC (V command is set. The unit page length specification value used by the ESC (C command is set. The page format specification value used by the ESC (c command is set. The paper dimension specification value used by the ESC (S command is set. [Operation] Commands that change the effects of this command. The printer settings are restored to their initial state to by the ESC @ command.	

### 5.1.14 Set absolute vertical print position ESC (V nL nH mL mH)

#### ESC (V nL nH mL mH)

Ver 1.00

---

[Name]	Set absolute vertical print position	[Operation]
[Format]	1BH, 28H, 56H, nL, nH, mL, mH	
[Range of Definition]	nL=02H, nH=00H (Vertical position set) = (mL + mH x 256) x (units set)	
[Function]	<ol style="list-style-type: none"><li>1) The printing position in the Y direction is set to a position spaced in the positive direction by (256 x mH + mL) x (the set absolute vertical position unit) x 25.4 mm from the origin upon the Y axis of the position management coordinate system.</li><li>2) If this command sets the printing position in the Y direction to a non-printable area, then the paper is ejected. The position management coordinate system is set to the next page. In addition, the printing position in the Y direction is reset to the origin on the Y axis of the new position management coordinate system.</li><li>3) Settings made in a negative direction are ignored.</li></ol>	
[Initial State]	-	
[Related Commands]		
	[Setting] Commands whose settings are affected by this command. None	
	[Setting] Commands that change the effects of this command. None	
	[Operation] Commands whose functionality is affected by this command. None	
	[Operation] Commands that change the effects of this command. The absolute vertical position unit value is set by the ESC ( U commands. The range of unprintable areas are set by the ESC ( c, ESC N and ESC O commands. The relative vertical position setting value, the non-printable area and the printing position in the Y direction are reset to their initial states by the ESC @ and ESC ( G commands.	

**5.1.15 Set absolute vertical print position (extended) ESC (V nL nH m1 m2 m3 m4**

**ESC (V nL nH m1 m2 m3 m4**

**Ver 2.00**

[Name]	Set absolute vertical print position(extended)	[Operation]
[Format]	1BH, 28H, 56H, nL, nH, m1, m2, m3, m4	
[Range of Definition]	nL=04H, nH=00H (Vertical position set) = (mL + mH x 256) x (units set) $0 \leq (m4*1000000H + m3*10000H + m2*100H + m1) \times 1440 \leq 1FFFFFFFH$ (absolute vertical print position value)	
[Function]	<ol style="list-style-type: none"> <li>1) The printing position in the Y direction is set to a position spaced in the positive direction by <math>(m4*256*256*256 + m3*256*256 + m2*256 + m1) \times</math> (absolute vertical print position value) from the Y axis of the position management coordinate system.</li> <li>2) If the printing position in the Y direction has been set by this command to a non-printable area, then the paper is ejected. The position management coordinate system is set to the next page. In addition, the printing position in the Y direction is reset to the origin upon the Y axis of the new position management coordinate system.</li> <li>3) Settings made in the negative direction are ignored.</li> </ol>	
[Initial State]	-	
[Related Commands]		
[Setting]	Commands whose settings are affected by this command. None	
[Setting]	Commands that change the effects of this command. None	
[Operation]	Commands whose functionality is affected by this command. None	
[Operation]	Commands that change the effects of this command. The absolute vertical position value is set by the ESC( U commands. The range of unprintable areas are set by the ESC( c, ESC N and ESC O commands. The relative vertical position setting value, the non-printable area and the printing position in the Y direction are reset to their initial states by the ESC @ and ESC (G commands.	

### 5.1.16 Set page format ESC (c nL nH tL tH bL bH

#### ESC (c nL nH tL tH bL bH

Ver 1.00

[Name]	Set page format	[Setting]
[Format]	1BH, 28H, 63H, nL, nH, tL, tH, bL, bH	
[Range of Definition]	nL=04H, nH =00H $((tH \times 256) + tL) < ((bH \times 256) + bL)$ $((bH \times 256) + bL) \times (\text{page management value}) \leq 1117.6\text{mm (44 inches)}$	
[Function]	1) The position management coordinate system origin on the Y axis is set to positive $(256 \times tH + tL) \times (\text{page management value})$ from the origin on the Y axis of the page management coordinate system. The bottom margin is set to $(256 \times bH + bL) \times (\text{page management unit value})$ from the origin of the position management coordinate system along the Y axis. 2) The printing position is shifted in the Y direction to the origin of the position management coordinate system. The origin on the X axis is not changed. 3) If the distance, from the origin of the position management coordinate system along the Y axis to the bottom margin position, is greater than the page length, then this distance is set as the new page length. 4) If the paper which is inserted is cut sheet paper, then the distance from the top margin position to the bottom margin position is set as the page length.	
[Initial State]	The top margin position is set to 8.382mm (0.33 inches). The bottom margin position is set to the page length. The page length is set to 558.8mm (22 inches).	
[Related Commands]	[Setting] Commands whose settings are affected by this command. The set page length is changed by the ESC (C commands). [Setting] Commands that change the effects of this command. The top margin and the bottom margin are set by the ESC commands. The page length and the bottom margin position are returned to their initial states by the ESC @ and the ESC (G commands). [Operation] Commands whose functionality is affected by this command. New page processing by the FF command is affected (the amount of movement is changed). New lines generated by the LF command, which go outside the printable area, are affected. Processing by the ESC (v command is affected). Processing by the ESC (V command is affected). [Operation] Commands that change the effects of this command. The page management value is set by the ESC (U command).	

### 5.1.17 Set page format (extended) ESC (c nL nH t1 t2 t3 t4 b1 b2 b3 b4

#### ESC (c nL nH t1 t2 t3 t4 b1 b2 b3 b4

Ver 2.00

[Name]	Set page format(extended)	[Setting]
[Format]	1BH, 28H, 63H, nL, nH, t1, t2, t3, t4, b1, b2, b3, b4	
[Range of Definition]	nL=08H, nH =00H $0 < t1, t2, t3, t4, b1, b2, b3, b4 \leq 255$ $0 \leq (t4 * 1000000H + t3 * 10000H + t2 * 100H + t1) * 1440 \leq 1FFFFFFFH$ (defined unit)  $0 \leq (b4 * 1000000H + b3 * 10000H + b2 * 100H + b1) * 1440 \leq 1FFFFFFFH$ (defined unit)  $(t4 * 1000000H + t3 * 10000H + t2 * 100H + t1) < (b4 * 1000000H + b3 * 10000H + b2 * 100H + b1)$	
[Function]	<ol style="list-style-type: none"> <li>1) The origin on the Y axis of the position management coordinate system is set to:  <math>(t4 * 256 * 256 * 256 + t3 * 256 * 256 + t2 * 256 + t1) \times</math> (defined unit)            from the origin on the Y axis of the page management coordinate system.            The bottom margin is set at a position spaced in the positive direction to:  <math>(b4 * 256 * 256 * 256 + b3 * 256 * 256 + b2 * 256 + b1) \times</math> (defined unit)            from the origin on the Y axis of the position management coordinate system.</li> <li>2) The printing position in the Y direction is shifted to the origin of the position management coordinate system. At this time, the origin on the X axis is not changed.</li> <li>3) If the distance from the origin on the Y axis of the position management coordinate system to the bottom margin position is greater than the page length, then this distance from the origin on the Y axis to the bottom margin position is set as the new page length.</li> <li>4) If the paper inserted for printing is cut sheet paper, then the distance from the top margin position to the bottom margin position is set as the page length.</li> <li>5) This command is only effective in graphics mode.</li> </ol>	
[Initial State]	<p>The top margin position is set to 8.382mm(0.33 inches) .            The bottom margin position is set to the page length.            The page length is set to 558.8mm(22 inches).</p>	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command.            The set page length is changed by the ESC (C command).</p> <p>[Setting] Commands that change the effects of this command.            The top margin and the bottom margin are set by the ESC commands.            The page length and the bottom margin position are returned to their initial states by the ESC @ and the ESC (G commands).</p> <p>[Operation] Commands whose functionality is affected by this command.            New page processing by the FF command is affected (the amount of movement is changed).            New lines generated by the LF command which go outside the printable area are affected.            Processing by the ESC (v command is affected).            Processing by the ESC (V command is affected).</p> <p>[Operation] Commands that change the effects of this command.            The page management units are set by the ESC (U command).</p>	

### 5.1.18 Monochrome Mode / Color Mode Selection ESC ( K nL nH m n

**ESC ( K nL nH m n**

**Ver 1.00**

---

[Name]	Monochrome Mode / Color Mode Selection	[setting]
[Format]	1BH, 2BH, nL, nH, m, n	
[Range of Definition]	nL=01H, nH=00H m=00H n=00H, 01H, 02H	
[Function]	1) Monochrome mode or color mode is selected. n=00H: Default mode (color mode) n=01H: Monochrome mode n=02H: Color mode 2) When monochrome mode is selected, the color selection commands ESC r and ESC (r are ignored. Furthermore, the results of color raster commands which have been dispatched in monochrome mode are unpredictable. 3) If n has any value other than the above, this command is ignored.	
[Initial State]	Default mode.	
[Supplementary Note]	Higher throughput speeds may be obtained for printing monochrome data when monochrome mode is selected rather than color mode. For printing in color, the color mode must be selected.	
[Related Commands]	[Setting] Commands whose settings are affected by this command. When monochrome mode is selected, color setting modes using the ESC r and ESC (r commands are ignored. [Setting] Commands that change the effects of this command. The default mode is selected by the ESC @ command. [Operation] Commands whose functionality is affected by this command. None. [Operation] Commands that change the effects of this command. None.	

### 5.1.19 Select MicroWeave printing mode ESC (i

#### ESC (i

Ver 1.00

---

[Name]	Select MicroWeave printing mode	[Operation]
[Format]	1BH, 28H, 69H, 01H, 00H, n	
[Range of Definition]	n=00H, 01H, 30H, 31H	
[Function]	1) Selects / deselects the MicroWeave mode. all parameters :   deselects	
[Initial State]	Non-MicroWeave mode	
[Related Commands]	[Setting] Commands whose settings are affected by this command. This command changes the non-selected state set by either the ESC (G   or ESC @ commands. [Setting] Commands that change the effects of this command. The ESC (G command sets the non-selected state. The ESC @ command sets the non-selected state. [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. None	

### 5.1.20 Selects dot size ESC (e nL nH m d

#### ESC (e nL nH m d

Ver 1.00

---

[Name]	Selects dot size	[Setting]
[Format]	1BH, 28H, 65H, nL, nH, m, d	
[Range of Definition]	nL=02H, nH=00H m=00H, d=00H, 10H, 21H, 22H, 25H, 31H, 32H	
[Function]	1) The dot size is set according to the value of d. 2) The d parameter has the following meaning: d=00H: MC1-1 1 bit (for DOS) d=10H: Economy d=21H: MC1-1 2 bit d=22H: MC1-2 2 bit d=25H: MC1-5 2 bit d=31H: MC2-1 2 bit d=32H: MC2-2 2 bit 3) Default dot sizes are specific to each printer model. 4) Dot control is valid irrespective of printing mode or printing density. 5) If the dot size is changed part way through a page, the results are unpredictable. 6) If n has any value other than the above, this command is ignored.	
[Initial State]	Default	
[Related Commands]	[Setting] Commands whose settings are affected by this command. Use of the ESC . command requires this command to be sent as follows: ESC ( e 2 0 0 0 [Setting] Commands that change the effects of this command. Default dot size is automatically selected by the ESC @ or ESC (G commands. [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. None	

### 5.1.21 Select color ESC (r nL nH m n

#### ESC (r nL nH m n

Ver 1.00

[Name] Select color [Setting]

[Format] 1BH, 28H, 72H, nL, nH, m, n

[Range of Definition] nL=02H, nH=00H  
m=00H, 01H  
n=00H, 01H, 02H, 04H

[Function] 1) The print color is selected according to the values of m and n.

m	N	Print color
00H	00H	Black
00H	01H	Magenta
00H	02H	Cyan
00H	04H	Yellow
01H	01H	Light Magenta
01H	02H	Light Cyan

2) If either m or n has a value other than those above, this command is ignored.

3) This command is only effective in graphics mode.

[Initial State] Black is selected.

[Related Commands]

[Setting] Commands whose settings are affected by this command.

None

[Setting] Commands that change the effects of this command.

The ESC @ command selects black.

[Operation] Commands whose functionality is affected by this command.

None

[Operation] Commands that change the effects of this command.

The ESC (G command puts the printer in graphics mode.

### 5.1.22 Set relative vertical print position ESC (v nL nH mL mH

#### ESC (v nL nH mL mH

Ver 1.00

---

[Name]	Set relative vertical print position	[Setting]
[Format]	1BH, 28H, 76H, nL, nH, mL, mH	
[Range of Definition]	nL=02H, nH=00H (Relative vertical set position) = (mL + mH x 256) x (set units)	
[Function]	1) The printing position in the Y direction is set to positive: (256 x mH + mL) x (relative vertical position setting value) x 25.4mm from the present Y printing position. 2) If the position set by this command is higher than the top margin position on the current page, this command is ignored. 3) If the Y direction printing position set by this command extends to a non-printable area, then the position management coordinate system is set to the next page; and the printing position in the Y direction is reset to the origin on the Y axis of the new position management coordinate system.	
[Initial State]	-	
[Related Commands]	[Setting] Commands whose settings are affected by this command. None [Setting] Commands that change the effects of this command. None [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. The relative vertical position setting value is set by the ESC (U command). The non-printable area is set by the ESC (c command). The relative vertical position setting value, the non-printable area, and the printing position in the Y direction are reset to their initial states by the ESC @ and ESC (G commands.	

### 5.1.23 Set relative vertical print position (extended) ESC (v nL nH m1 m2 m3 m4

**ESC (v nL nH m1 m2 m3 m4**

**Ver 2.00**

[Name]	Set relative vertical print position(extended)	[Setting]
[Format]	1BH, 28H, 76H, nL, nH, m1, m2, m3, m4	
[Range of Definition]	nL=04H, nH=00H $0 \leq (m4*1000000H + m3*10000H + m2*10H + m1) \times 1440 \leq 1FFFFFFFH$ (relative vertical print position value)	
[Function]	<ol style="list-style-type: none"> <li>1) The printing position in the Y direction is set to positive:  <math>(m4*256*256*256 + m3*256*256 + m2*256 + m1) \times</math> (relative vertical print position value)              from the present Y printing position.</li> <li>2) If the position set by this command is higher than the top margin position on the current page, this command is ignored.</li> <li>3) If the Y direction printing position set by this command extends to a non-printable area, then the position management coordinate system is set to the next page; and the printing position in the Y direction is reset to the origin on the Y axis of the new position management coordinate system.</li> </ol>	
[Initial State]	-	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. None</p> <p>[Setting] Commands that change the effects of this command. None</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command.              The relative vertical position setting value is set by the ESC (U command).              The non-printable area is set by the ESC (c commands).              The relative vertical position setting value, the non-printable area, and the printing position in the Y direction are reset to their initial states by the ESC @ and ESC (G commands).</p>	

### 5.1.24 Print raster graphics ESC . c v h m nL nH d1...dk (c=0,1)

ESC . c v h m nL nH d1...dk (c=0,1)

Ver 1.00

[Name]	Print raster graphics	[Operation]
[Format]	1BH, 2EH, c, v, h, m, nL, nH, d1...dk	
[Range of Definition]	c=0, 1, 2 (a description of the behavior of this function when c == 2 is in the next section) v=5, 10, 20, 30 (v/3600 dpi) h=5, 10 (h/3600 dpi) $0 \leq nL \leq 255$ $0 \leq nH \leq 127$ $0 \leq d \leq 255$ m=1, 8, 24, (color mode)	

[Function] This function prints raster graphics at c style compression, with y/3600 dpi vertical density, and h/3600 dpi horizontal density, to print out m raster lines, or scan lines, or rows of dots in the vertical direction, covering  $(nH * 256) + nL$  total dots, using k subsequent bytes of data.

- If c has any value other than those specified above, this command terminates at the instant that c is processed.  
If either v or h has any value other than the above, this command is ignored.
- The actual image pattern is generated according to a raster method determined by the following parameters:

c: printing mode

00H: full graphics mode (non-compressed mode)

01H: run-length encoded compression mode

02H: TIFF compression mode

If TIFF compression mode is used, then m must be equal to 1.

Explanation of this function where c == 2 is in the next section

v: printing density in the vertical direction v/3600 (dpi)

h: printing density in the horizontal direction h/3600 (dpi)

m: number of dots (rows) in the vertical direction, number of raster or scan lines

nL, nH: number of dots covered in the horizontal direction =  $((256 \times nH) + nL)$

k: number of items of data =  $m \times \text{int}((nH \times 256 + nL + 7)/8)$  for uncompressed data

= undeterminable amount for compressed data


d: data

Full graphics mode (non-compressed mode)

In full graphics mode, all of the data is transferred in raster format.

Raster data that extends beyond the  $((256 * nH) + nL)$  dot area boundary will be automatically clipped or discarded.

The total amount of data sent is  $k = \text{int}((256 \times nH + nL + 7)/8) \times m$  bytes.

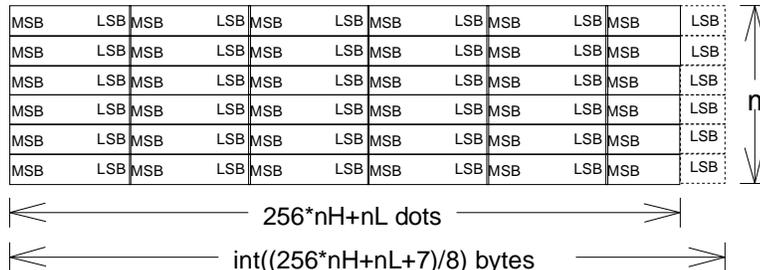

Run-length encoding compression mode

In run-length encoding compression mode, the data to be printed is always transferred in the format (counter) + (data), where counter represents one byte of information.

If  $0 \leq \text{counter} \leq 127$ , then the data following the counter is non-compressed data, and the length of the compressed data is (counter)+1 bytes.

If  $128 \leq \text{counter} \leq 255$ , then the data following the counter will be one byte of compressed data, . This single compressed byte of data is thereafter to be repeated  $257 - (\text{counter})$  times..

- 3) This function also increments the X printing position relative to the current X printing position by the amount:  $(256 \times nH + nL) \times h / 3600 \times 25.4\text{mm}$ .  
If this command specifies an X position in the non-printable area (right margin), the right margin position is automatically reset to the X value of the new printing position.
- 4) If image data is designated for a non-printable area, then the image data designated for that area is ignored.

The following parameter combinations are supported by this command:

**This printer doesn't have printer microweave mode.**

1. Case of microweave mode off

Mode (V x H)	Parameter				ESC(e*3	Used Nozzle number	Comment
	c	v	h	m	d		
360x360	0/1/2	10	10	1/8/24	00h	90 Nozzles	*1 *2

\*1 In these circumstances, it is recommended to set m equal to 1.

\*2 Whenever the ESC . command is used, the Normal (ESC ( e 2 0 0 0)) size must be selected.

[Initial State]  
[Related Commands]

Character mode

[Setting] Commands whose settings are affected by this command.  
None

[Setting] Commands that change the effects of this command.  
None

[Operation] Commands whose functionality is affected by this command.  
None

[Operation] Commands that change the effects of this command.  
None

## 5.1.25 Enter TIFF compressed mode ESC . 2 v h 1 0 0

**ESC . 2 v h 1 0 0**

**Ver 1.00**

[Name]	Enter TIFF compressed mode	[Setting]												
[Format]	1BH 2EH 32H, v, h, 01H, 00H, 00H													
[Range of Definition]	v=5, 10 (v/3600 dpi) h=5, 10 (h/3600 dpi)													
[Function]	1) TIFF format raster graphics compression mode is set from this command until the <EXIT> command. 2) This supports the TIFF compression method. 3) Each of the parameters has the following meaning: v: printing density in the vertical direction v/3600 (dpi) h: printing density in the horizontal direction h/3600 (dpi) Only the following combinations of printing densities in the vertical direction and in the horizontal direction are permitted: <table border="1"><thead><tr><th>v</th><th>Vertical direction (dpi)</th><th>h</th><th>Horizontal direction (dpi)</th></tr></thead><tbody><tr><td>10</td><td>360</td><td>10</td><td>360</td></tr><tr><td>5</td><td>720</td><td>5</td><td>720</td></tr></tbody></table> 4) The commands which are valid in this mode are the following: <XFER>: transfer graphics image data <MOVX>: set horizontal position <MOVY>: set vertical position <COLR>: set color <CR>: set printing position in the X direction to the left margin position <EXIT>: cancel compressed format mode <MOVXBYTE>: make the unit of horizontal direction setting into byte units <MOVXDOT>: make the unit of horizontal direction setting into dot units 5) The <MOVX> command uses the relative horizontal position setting value set by the ESC (U command). The <MOVY> command uses the relative vertical position setting value set by the ESC (U command). 6) The printing position in the X direction is set to the origin upon the X axis. Character mode	v	Vertical direction (dpi)	h	Horizontal direction (dpi)	10	360	10	360	5	720	5	720	
v	Vertical direction (dpi)	h	Horizontal direction (dpi)											
10	360	10	360											
5	720	5	720											
[Initial State]														
[Related Commands]														
[Setting]	Commands whose settings are affected by this command. The full graphics mode set by the ESC (G command) is switched to the run-length encoding compression mode.													
[Setting]	Commands that change the effects of this command. The TIFF compression mode is canceled by the EXIT command.													
[Operation]	Commands whose functionality is affected by this command. Only the following commands are valid: XFER           CR MOVX           EXIT MOVY           MOVXBYTE COLR           MOVXDOT													
[Operation]	Commands that change the effects of this command. The relative horizontal and vertical position setting values are set by the ESC (U command).													

### 5.1.25 Set paper dimensions ESC (S nL nH w1 w2 w3 w4 l1 l2 l3 l4

ESC (S nL nH w1 w2 w3 w4 l1 l2 l3 l4

Ver 1.00

[Name] Set paper dimension

[Format] 1BH, 28H, 53H, nL, nH, w1, w2, w3, w4, l1, l2, l3, l4

[Range of Definition]

nL=04H, nH=00H

$0 \leq (w4 * 1000000H + w3 * 10000H + w2 * 100H + w1) * 1440 / (\text{defined unit}) \leq 7FFFFFFFH$

$0 \leq (l4 * 1000000H + l3 * 10000H + l2 * 100H + l1) * 1440 / (\text{defined unit}) \leq 7FFFFFFFH$

[Function]

- 1) Set paper length ( from top-edge to bottom-edge ) and paper width ( from left-edge to right-edge ) in the defined unit.
- 2) This command is used to expand the bottom-margin ( 3mm) of printer.
- 3) Paper length and width is defined by the following formula:  
physical paper length =  $( l4 * 1000000H + l3 * 10000H + l2 * 100H + l1 ) * (\text{defined unit})$   
physical paper width =  $( w4 * 1000000H + w3 * 10000H + w2 * 100H + w1 ) * (\text{defined unit})$
- 4) This command can be used only during graphics mode, entered by sending the ESC (G command).
- 5) This command will work effectively only when the defined paper length is the same as the physical paper length measured by the printer.
- 6) If some portion of an image extends beyond the bottom edge of the page, then that extended portion of the image is deleted.  
Also, if the defined paper length is shorter than the actual paper length, the portion of an image beyond the defined paper length will be deleted.
- 7) Paper width is ignored by the printer.

[Initial State]

-

[Related Commands]

[Setting] Commands whose settings are affected by this command.

None

[Setting] Commands that change the effects of this command.

The page control setting unit is set by the ESC (U command).

[Operation] Commands whose functionality is affected by this command.

None

[Operation] Commands that change the effects of this command.

The initial state is returned to by the ESC @ command.

The initial state is returned to by the ESC(G command).

### 5.1.27 Set the raster image resolution ESC (D nL nH rL rH v h

#### ESC (D nL nH rL rH v h

Ver 1.00

[Name]	Set the raster image resolution
[Format]	1BH, 28H, 44H, nL,nH, rL, rH, v,h
[Range of Definition]	nL=04H, nH=00H 0 <= v <= 127 0 <= h <=127
[Function]	<ol style="list-style-type: none"> <li>1) Sets the raster image resolution ( ESC i ).            Vertical resolution : ( rH*256 + rL ) / v dpi            Horizontal resolution : ( rH*256 + rL ) / h dpi</li> <li>2) Available resolutions are : 120, 180, 360, 720dpi</li> <li>3) Following parameters are supported.</li> </ol>

**This printer doesn't have printer microweave mode.**

1. Case of microweave mode off

Mode (V x H)	ESC (D		ESC i	ESC(e	Used Nozzle number	Comment
	v / r	h / r	mH*256+mL	d		
360x90	4/1440	16/1440	90	10h/31h/32h	90Nozzles	
720x90	2/1440	16/1440	90	21h/22h//25h	90Nozzles	

\*1 The parameter (mH\*256+mL)=1 is recommended.

\*2 This command may be especially useful in circumstances where programmers utilize their own chosen algorithms to improve print quality.

[Initial State] -

[Related Commands]

[Setting] Commands whose settings are affected by this command.

The Resolution set of Raster image exerts the influence on the processing by the ESC i command .

[Setting] Commands that change the effects of this command.

The Resolution setting of Raster image is returned to the initial states by the ESC @ and the ESC (G commands.

[Operation] Commands whose functionality is affected by this command.

None

[Operation] Commands that change the effects of this command.

None

5.1.28 Transfer Raster image ESC i r c b nL nH mL mH d1.....dk

Ver 1.00

ESC i r c b nL nH mL mH d1.....dk

[Name] Transfer Raster image  
 [Format] 1BH,69H, r, c, b, nL, nH, mL, mH, d1, d2, ..., dk  
 [Range of Definition]


r = 00H, 01H, 02H, 04H, 11H, 12H  
 c = 00H, 01H  
 b = 01H, 02H  
 0000H <= (nH\*256 + nL) <= 7FFFH  
 0001H <= (mH\*256 + mL) <= 7FFFH

[Function]

1) Prints dot graphics in raster format.  
 2) Parameters are used as described below:  
 r : color of ink  
     00H:black                      01H:magenta  
     02H:cyan                      04H:yellow  
     11H:light magenta            12H:light cyan  
 c : compression method  
     00H:non-compressed  
     01H:Run Length Encoding  
 b : bit length required for each pixel of image data  
     01H:1bit/pixel (for Micro, Normal x 1 x 2 dot  
         For every 1 bit of data:  
             0 no dot  
             1 a normal size dot for the current dpi  
             will be printed at the pixel location for that one bit.  
     02H:2bits per pixel (for dot sizes requiring 2 bits to designate the size)  
         For every 2 bits of data:  
             00 no dot  
             01 a small dot  
             10 a medium size dot  
             11 a large size dot  
         will be printed at the pixel location for those 2 bits.  
         Sample bits of data (for 4 pixels of an image), and the results of that data,  
         are displayed in the upcoming diagram.

nL, nH: Horizontal byte count, according to the following formula:  
 $nH = \text{INT}(\text{horizontal byte count} / 256)$   
 $nL = \text{MOD}(\text{horizontal byte count} / 256)$   
 $nH = \text{INT}(((\text{horizontal dot count}) * (\text{bit length of each pixel}) + 7) / 8) / 256$   
 $nL = \text{MOD}(((\text{horizontal dot count}) * (\text{bit length of each pixel}) + 7) / 8) / 256$   
 mL, mH: Vertical dot count ( rows of dot graphics ), according to the following formula:  
 $mH = \text{INT}(\text{vertical dot count} / 256)$   
 $mL = \text{MOD}(\text{vertical dot count} / 256)$   
 k : Total numbers of data bytes, according to the following formula:  
 $k = (nH*256 + nL) * (mH*256 + mL)$

**\*\* Sample bits of data for 4 pixels of an image using 2 bits data/pixel:**  
 The size of the dot is designated with a binary number, using 2 bits for every 1 picture element.  
 No Dot: 00, small dot: 01, medium dot: 10, large dot: 11

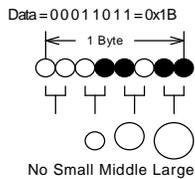

[Initial State] -

### 5.1.29 Turn unidirectional mode on/off ESC U n

#### ESC U n

Ver 1.00

---

[Name]	Turn unidirectional mode on/off	[Setting]
[Format]	1BH, 55H, n	
[Range of Definition]	n=00H, 01H, 02H, 30H, 31H, 32H	
[Function]	1) The printing direction is selected according to the value of n in the following manner: n=00H or 30H: selects bi-directional printing n=01H or 31H: selects unidirectional printing (0 to 80 column) n=02H or 32H: selects automatic printing direction control n=03H or 33H: selects unidirectional printing (80 to 0 column) 2) If n has any value other than the above, this command is ignored.	
[Initial State]	Bi-directional printing	
[Related Commands]	[Setting] Commands whose settings are affected by this command. ESC @ initialized values may be cancelled by this command. [Setting] Commands that change the effects of this command. ESC @ command will return the printer to its Initial State values. [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. None	

### 5.1.30 Set relative horizontal printing position ESC \ nL nH

ESC \ nL nH

Ver 1.00

---

[Name]	Set relative horizontal printing position	[Operation]
[Format]	1BH, 5CH, nL, nH	
[Range of Definition]	$(nL + 256 \times nH) \times (\text{relative horizontal position setting value}) \times 25.4\text{mm}$	
[Function]	<ol style="list-style-type: none"><li>1) If bit 6 of nH is 1, then nH will be negative, and the Most Significant Bit (bit 7) is presumed to be 1. Negative values are expressed in two's complement.</li><li>2) The printing position in the X direction is incremented from the current X position by the following amount <math>(256 \times nH + nL) \times (\text{relative horizontal position setting value})</math>. The relative horizontal position setting value is set with the ESC (U command). The defined default relative horizontal position setting value is 0.141mm(1/180inch).</li><li>3) If the position set by this command is within the non-printable area, it is ignored. However, it is possible to shift to a position in the right margin area.</li></ol>	
[Initial State]	-	
[Related Commands]	<p>[Setting] Commands whose settings are affected by this command. None</p> <p>[Setting] Commands that change the effects of this command. None</p> <p>[Operation] Commands whose functionality is affected by this command. None</p> <p>[Operation] Commands that change the effects of this command. The relative horizontal position setting value is set by the ESC (U command). The relative horizontal position setting value is reset to its initial state by the ESC @ or the ESC (G commands).</p>	

### 5.1.31 Set relative horizontal print position ESC (/ nL nH n1 n2 m1 m2

ESC (/ nL nH n1 n2 m1 m2

Ver 1.00

[Name]	Set relative horizontal print position	[Operation]
[Format]	1BH, 28H, 2FH, nL, nH, m1,m2,m3,m4	
[Range of Definition]	nL=04H, nH=00H $0 \leq ((m4 * 1000000H) + (m3 * 10000H) + (m2 * 100) + m1) \times 2880 \leq 209.973 \text{ mm} = 23808 \text{ inches}$ (relative horizontal position setting value)	2880

If bit 7 of m4 is 1, then m4 will be a negative value.

- [Function]
- 1) If bit 7 of m4 is 1, then m4 will be a negative value. Negative values are expressed in two's complement.
  - 2) The printing position in the X direction is incremented from the current X position by the following amount

$$(m4 \times 256 \times 256 \times 256 + m3 \times 256 \times 256 + m2 \times 256 + m1) \times (\text{relative horizontal position setting value})$$

OR

$$((m4 \times 256^3) + (m3 \times (256^2)) + (m2 \times 256) + m1) \times (\text{relative horizontal position setting value})$$

The relative horizontal position setting value is set with the ESC (U command.

The defined default value for this command is 0.423mm(1/60inch).

- 3) If the position set by this command is within the non-printable area, it is ignored. However, it is possible to shift to a position in the right margin area.
- 4) This command is only effective in graphics mode.

[Initial State]

-

[Related Commands]

[Setting] Commands whose settings are affected by this command.

None

[Setting] Commands that change the effects of this command.

None

[Operation] Commands whose functionality is affected by this command.

None

[Operation] Commands that change the effects of this command.

The relative horizontal position setting value is set by the ESC (U command.

The relative horizontal position setting value is reset to its initial state by the ESC @ or the ESC (G commands.

### 5.1.32 Select printing color ESC r n

#### ESC r n

Ver 1.00

---

[Name]	Select printing color	[Setting]
[Format]	1BH, 72H, n	
[Range of Definition]	00H ≤ n ≤ 04H	
[Function]	1) The printing color is selected according to the value of n, as follows: if n=0: black if n=1: magenta if n=2: cyan if n=4: yellow 2) If n has a value other than the above, this command is ignored.	
[Initial State]	Black selected.	
[Related Commands]	[Setting] Commands whose settings are affected by this command. None [Setting] Commands that change the effects of this command. The ESC @ command selects black. [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. None	

### 5.1.33 Set Print method ID ESC (m n

#### ESC (m nL nH n

Ver 1.00

---

[Name]	Set Print method ID	[Setting]
[Format]	1BH, 28H, 6DH, nL, nH, n	
[Range of Definition]	nL=01H,nH=00H 10H,20H,21H,22H,23H,40H,41H,50H,51H,52H,53H,54H,55H,56H,57H,58H,B0H,B1H,B2H, C2H,C3H	
[Function]	1) The print mode is selected according to the values of n. 2) If n have a value other than those above, this command is ignored. 2) This command is only effective in graphics mode. 3) The value of setting refers to CHAPTER3.	
[Initial State]	-	
[Related Commands]	[Setting] Commands whose settings are affected by this command. None [Setting] Commands that change the effects of this command. The ESC @ command selects black. [Operation] Commands whose functionality is affected by this command. None [Operation] Commands that change the effects of this command. The ESC (G command puts the printer in graphics mode.	

## CHAPTER 6: REMOTE MODE

This section of the Programming Note will provide an overview of EPSON's Remote Mode. The following commands are useful for this printer driver development:

Enter Remote Mode "ESC ( R",  
Set Meca Sequence "SN",  
Exit Remote Mode "ESC NUL"

These Remote Mode commands were used in Chapter 4: Command Sequence – 4.2 Command Transfer Sequence. Individual explanations for these commands, and other remote mode commands referenced in this paper, are provided hereafter.

### 6.1 Remote Mode Language Description

In addition to EPSON's ESC/P and its extension ESC/P2 serial printer languages, most EPSON printers also implement another EPSON serial printer language that is bi-directional. That language is called Remote Mode. It is entered from ESC/P or ESC/P2 mode.

Remote Mode commands should not be sent to the printer in between consecutive ESC/P2 commands.

The primary purposes for EPSON Remote Mode printer control language are to provide the host with the following:

- 1) Current printer status
- 2) Printer identification
- 3) Capability of setting the printers front panel operations remotely (print the nozzle check pattern, clean print heads, set hardware adjustments for paper size and thickness, save current settings into NVR (non-volatile RAM, print the dot alignment test pattern, etc.)

The Remote Mode command architecture is as follows:


Enter Remote Mode (leave ESC/P or ESC/P 2)

- change printer settings (model dependent) via Remote Mode Set commands and/or
- request printer settings (model dependent) via Remote Mode Reply commands

Exit Remote Mode (enter ESC/P or ESC/P 2)

-----  
Printer State Reply (printer state is automatically sent to the host if enabled by the Remote Mode command "ST" 02h 00h 00h m1 Turn printer state reply on/off)

The ESC/P2 - Remote Mode command architecture can be represented by the following simplified State Diagram.

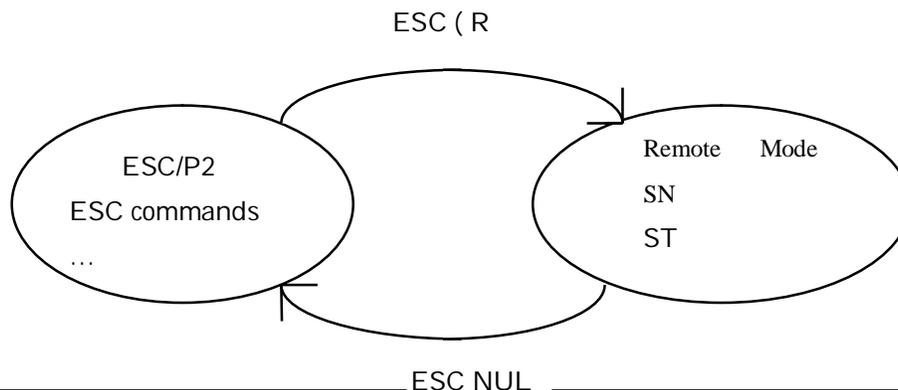

All of the Remote Mode commands, except Enter Remote Mode, are available only in Remote Mode.

The Enter Remote Mode and Exit Remote Mode commands begin with the ESC code, (as do many ESC/P2 commands). Excluding these commands, Remote Mode commands generally follow the following format:

“XX”  $n_L n_H$  < 256 x  $n_H$  +  $n_L$  - number of parameter bytes>

The “XX” represents 2 ASCII characters that indicate the Remote Mode command primary function, and  $n_L + (n_H \times 256)$  indicates the number of subsequent parameters.

If the first parameter following the length count is 00H then the Remote Mode command makes a setting.

Set printer settings: “XX”  $n_L n_H$  00H m1...mx

### 6.1.1 Enter Remote Mode (Remote Mode) ESC (R 08H 00H 00H "REMOTE1"

ESC "(R" 08H 00H 00H "REMOTE1"

Enter Remote Mode

---

[Format]

ESC (R 08H 00H 00H "REMOTE1"

[Function]

- \* 1) The current emulation mode is terminated
- \* 2) Print data present in the buffer is sent to the printer to be printed
- \* 3) The printer enters remote mode.
- \* Remote mode continues until the "Exit Remote Mode" command is received.
- \* In the remote mode, XX [nL] [nH] [00H] [m1] ... [mx] type control codes are available.
  
- \* This command is only valid in text mode.

### 6.1.2 Load Power-On Default NVR into RAM (Remote Mode) "LD" 00H 00H

[Format]

"LD" 00H 00H

[Function]

Loads the power-on default from a non-volatile memory into RAM, and begins using these values as the current printer operating system settings. This command is only available in Remote Mode.

### 6.1.3 Set printer timer (Remote Mode) " TI" 08H 00H 00H YYYY MM DD hh mm ss

[Format]

"TI" 08H 00H 00H YYYY MM DD hh mm ss

- \* Each of the parameters YYH,YYL,MM,DD,hh,mm and ss is a one byte binary format parameter, and their definitions are as follows:

Parameter	meaning	Range
YYH	Year	0-xxxx
YYL	(YYL+YYH*256)	
MM	Month	1-12
DD	Day	1-31
hh	hour	0-23
mm	minute	0-59
ss	second	0-59

[Function]

- \* If the parameter is out of range, this command is ignored, and the previous setting is maintained.

#### 6.1.4 Set horizontal print position (Remote Mode) “FP” 03H 00H 00H m1 m2

[Format]

“FP” 03H 00H 00H m1 m2:

[Function]

\* The parameter “m1” , “m2” are each one byte binary data that indicate the below condition according to the following formula.

\* The unit of print start position is 1/360 inch.

$$(\text{print start position}) = ((m2 * 256) + m1)$$

Horizontal Print Start Position	m1	m2
Standard position	00H	00H
Borderless print position(-2.5mm)	B0H	FFH

\* If the parameter is out of range, this command is ignored, and the previous setting is maintained.

### 6.1.5 Turn printer state reply on/off (Remote Mode) “ST” 02H 00H 00H m1

[Format]

“ST” 02H 00H 00H m1

[Parameters]

- Parameter m1 is a one byte binary parameter, and indicates the setting as follows:

m1	Printer State Reply
10H	Binary state reply Off
11H	Binary state reply On

[Function]

- The default environment status transmission is set. See the paragraph of status transmission for the status transmission.
- This setting depends on interfaces that receive this command. For example, this command is received with the built-in Macintosh serial interface; the status transmission for the built-in Macintosh serial interface is set.
- If the parameter m1 is out of range, or if setting of parameter m1 is not supported by the product, this command is ignored, and the existing setting is maintained.
- This command will be ignored if this command is not supported.
- This command is only available in Remote Mode.

Auto interface select function

- If the status transmission is ON, the interface transmits the status whether the interface is selected or the interface is deselected by the auto interface select function.

### 6.1.6 Job name set “JH” nL nH 00H m1 m2 m3 m4 m5 <job name>

#### [Format]

“JH” nL nH 00H m1 m2 m3 m4 m5 <job name>

nL = (length of <job name>) + 6  
nH = 00H

#### [Parameters]

The parameter “m1” is one byte binary data that indicates types of job name information. The parameters “m2”, “m3”, “m4”, “m5” are each one byte binary data that indicate Job ID. “<job name>” is a maximum of 32 bytes of binary codes that describe a job name.

m1=00h:<job name>=Host name(Max 32byte)

m1=01h:<job name>=Product ID

m1=02h:<job name>=Document name

m1=03h:<job name>=User name

#### [Function]

Set the job name of the job specified by “JS” command.

This command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

**6.1.7 Start job** “JS” mn 00H 00H <job name> m1

**6.1.8 End job** “JE” 01H 00H 00H

[Format]

“JS” nL nH 00H <job name> m1

“JE” 01H 00H 00H

nL = (length of <job name>) + 2

nH = 00H

[Parameters]

The parameter “m1” is one byte binary data that fixed to zero.

[Function]

Construct a print job. Then turn page and line position reply on/off, and set the position reply repeat rate if the position reply is enabled. If the host uses the cancel job command or it needs the page and line position reply, it must send print data as a print job.

The print job is started with the “JS” command and terminated with the “JE” command. After starting a job with the “JS”, if the “JS” is sent again without the “JE”, the previous print job will be terminated with the second “JS”.

After power-on initialization, the print job is not defined, and position reply is disabled.

This command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

### 6.1.9 Paper Feed Setup "SN" 01H 00H 00H

[Format]

"SN" 01H 00H 00H

[Parameters]

None

[Function]

- \* Changes the mechanical sequence from the default environment to the values specified by the below command. If the below command is not sent, the printer selects the plain paper mechanical sequence.

Item	Command
Paper path	PP command
Duplex Printing	DP command
Color / Monochrome setting	ESC (K command)
Set Print method ID	ESC (m command)
Paper types	MI command
Platen gap setting	US command
Bottom margin setting	US command
Check paper size	US command

- \* This command is only valid in remote mode.

### 6.1.10 Select paper path “PP” 03H 00H 00H m1 m2

[Format]

“PP” 03H 00H 00H m1 m2

[Parameters]

The parameter “m1” and “m2” are each one byte binary data.

The “m1” describes paper is continuous type or a single sheet in CSF or a manual inserted sheet as shown below.

Paper	m1	m2
ASF Rear	01H	FFH
CD-R	02H	01H

[Function]

Select paper path to be used for the temporary default.

The previous setting will be kept if the parameter “m1” and “m2” exceeds its limit.

Also, this command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

### 6.1.11 Select paper media “MP” 04H 00H 00H m1 m2 m3

[Format]

“MP” 04H 00H 00H m1 m2 m3

[Parameters]

The parameter “m1”, “m2” and “m3” are each one byte binary data.

“m1” is always 01H.

The “m2” describes paper media as shown below.

0	普通紙 ※1	Plain Paper Bright White Paper
1	ファイン専用紙	360dpi Ink Jet Paper
2	アイロンプリントペーパー	Iron-On Cool Peel Transfer Paper
3	スーパーファイン専用紙	Photo Quality Ink Jet Paper 2
4	スーパーファイン専用ラベルシート	Photo Quality Self Adhesive Sheets
5	フォトマット紙	Matte Paper-Heavyweight
6	フォトプリント紙	Photo Paper (Glossy Photo Paper)
7	スーパーファイン専用光沢フィルム	Photo Quality Glossy Film
8	ミニフォトシール	Photo Stickers 4/16
9	専用 OHP シート	Ink Jet Transparencies
10	スーパーファイン専用バックライトフィルム	Back Light Film
11	写真用紙<光沢>	Premium Glossy Photo Paper
12	写真用紙<絹目調>	Premium Semigloss Photo Paper
13	-----	Premium Luster Photo Paper
14	MC 光沢紙	Glossy Paper -Photo weight
15	フォトマット紙/顔料専用	Archival Matte Paper (Enhanced Matte Paper)
16	画材用紙/顔料専用	Watercolor Paper-Radiant White
17	MC デザイン光沢紙	Professional Glossy Paper
18	マットボード紙	-----
19	スーパーファイン専用光沢紙(薄口)	Photo Quality Glossy Paper
20	-----	Dupont/EPSONSemigloss Proofing Paper-A
21	スーパーファイン専用紙 2	-----
22	-----	Double Sided Matte Paper
23	-----	ColorLife Photo Paper
24	光沢紙	Economy Photo Paper
25	-----	Velvet Fine Art Paper
26	PX ブルーフ用紙ロール<微光沢>	EPSON Proofing Paper Semimatte
27	官製ハガキ(再生紙)	-----
28	官製ハガキ(インクジェット紙)	-----
29	スーパーファイン紙	Photo Quality Ink Jet Paper
30	フォト光沢紙/顔料専用	DURABrite Ink Glossy Photo Paper (for Americas) DURABrite Photo Paper (for Europe)
31	マット名刺	-----
32	ハガキ宛名面	-----
33	フォトアルバムキット	-----
34	フォトスタンドキット	-----
35	-----	RC-B
36	写真用紙<光沢 EG>	Premium Glossy Photo Paper
37	封筒	Envelope
38	写真用紙クリスピー(高光沢)	Ultra Glossy Photo Paper (Europe) Ultra Premium Glossy Photo Paper(Americas)
39	Ultra Smooth Fine Art Paper	Ultra Smooth Fine Art Paper
40	スーパーファイン専用はがき	-----

41	写真用紙スタンダード<光沢>	Premium Glossy Photo Paper (S-RC)
42	郵便光沢はがき	-----
43	写真用紙エントリー<光沢>	Photo Paper Glossy (for America) Glossy Photo Paper (for Europe)
91	CD/DVDレーベル	-----
92	CD/DVDレーベル(高画質対応品)	-----
93	光沢対応 CD/DVDレーベル	-----
99	クリーニングシート	-----

The “m3” describes paper size as shown below.

0	A4	
1	Letter(8 1/2x11 in)	
2	Legal(8 1/2x14 in)	
3	A5	
4	A6	
5	B5	
6	Executive(7 1/4x10 1/2 in)	
7	Half-Letter(5 1/2x8 1/2 in)	
8	Panoramic Photo Paper	
9	Photo Paper(4 x 6 in)with perforated	
10	Photo Paper(4 x 6 in)	
11	5x8 in	
12	8x10 in	
13	Photo Paper(100x150 mm)	
14	Photo Paper(200x300 mm)	
15	L size	
16	Japanese Postcard	
17	Japanese Double Postcard	
18	Envelope #10(4 1/8x9 1/2 in)	Landscape
19	Envelope C6	Landscape
20	Envelope DL	Landscape
21	Envelope(220x132 mm)	Landscape
22	Japanese CHOKEI 3	
23	Japanese CHOKEI 4	
24	Japanese YOKEI 1	
25	Japanese YOKEI 2	
26	Japanese YOKEI 3	
27	Japanese YOKEI 4	
28	5x7 in(2Lsize)	
29	Envelope #10(4 1/8x9 1/2 in)	Portrait
30	Envelope C6	Portrait
31	Envelope DL	Portrait
32	Envelope(220x132 mm)	Portrait
33	Japanese business card 89x55mm	
34	Business card 89x50mm	
35	Card 54x86mm	
36	Business card 55x91mm	
37	フォトアルバム背表紙 127x184mm	
38	フォトアルバム背表紙 210x303mm	
39	フォトアルバム L判横 127x198mm	
40	フォトアルバム 2L判 127x177.9mm	
41	フォトアルバム A5 横 210x148.3mm	
42	フォトアルバム A4 210x296.6mm	
43	Hi-vision 102x180mm	
61	A3 ノビ (Super A3/B)	
62	A3	

63	B4	
64	US B(11x17 in)	
65	11x14 in	
66	B3	
67	A2	
68	US C(17x22 in)	
69	四切 254x305mm (10x12")	
70	12x12" (308.4x308.4 mm)	
99	User-defined	

\*1: Unknown and Default mean A4 and Plain Paper.

\*2: It includes Photo Quality Ink Jet Paper (for Europe).

[Function]

Set paper type to the temporary default.

The previous setting will be kept if the parameters are out of range.

Also, this command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

### 6.1.12 Select Duplex Printing “DP” 02H 00H 00H m1

[Format]

“DP” 02H 00H 00H m1

[Parameters]

The parameter “m1” is one byte binary data that indicates duplex print setting as shown below.

Duplex Printing	m1
Duplex mode off	00H
Duplex mode on	01H
Reserved	02H - FFH

[Function]

m1=01H :

- (1)The printer fixes the I/F that this command is received one .
- (2)The printer switches to the duplex printing mode.
- (3)State Reply is changed.

m1=00H :

- (1)The printer releases the fixed I/F.
- (2)The printer switches to the normal mode.

Select a duplex printing mode to be used for the temporary default.

The previous setting will be kept if the product does not have the character set selected with the parameter “m1”.

Also, this command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

### 6.1.13 User Setting “US” 03H 00H 00H m1 m2

[Format]

“US” 03H 00H 00H m1 m2

[Parameters]

The parameter “m1”, “m2” are each one byte binary data that indicates shown as below.

“m1”	Item	“m2”	Setting
00H	Bottom margin setting	00H	0 = Standard
		01H	1 = Max
		02H	2 = Borderless
01H	Platen gap setting	00H	Normal
		01H	One more gap from normal
02H	Check paper size	00H	No
		01H	Yes
03H	Platen Gap absolute position	01H	PG position1 (PG-) Only Bi-D Adjustment Mode
04H	Economy print setting*	00H	Fast-Mode
		01H	Normal-Mode
05H	Load Mode Setting	00H	Fast-Mode(Default-Mode)
		01H	Silent-Mode
06H - FFH	Reserved		

\*This command (Economy print setting) is effective only the following mode.

If this command is not used, the product is actuated with Fast-Mode.

Print mode	Unit No
Economy	10H

[Function]

Select a printer setting shown upper to the temporary default.

The previous setting will be kept if the parameters are out of range.

Also, this command will be ignored and skipped if the product does not support this command.

This command is available only in Remote.

#### 6.1.14 Terminate Remote Mode (Remote Mode) ESC 00H 00H 00H

[Format]

ESC 00H 00H 00H

[Function]

- \* Copy the default environment to the current setting.
- \* Execute the ESC “@” command in ESC/P2. (Execute software initialization.)
- \* Exit from Remote mode and enter to the selected printer control language.

## CHAPTER 7: STATUS REPLY CODE SPECIFICATION

This printer can send its current state to the host computer via the USB interface. The printer can be set to update the host every few seconds, or when the printer status changes. The Printer Status Reply consists of the string below. Varying parameters of the string reflect the current printer status. By monitoring this information on the host computer, you can provide users with basic yet very practical information that can make it easier for customers to use your software and these ink jet printers.

This printer supports new binary state reply format.

Format of reply strings:  
@BDC [SP] ST [CR] [LF]  
Reply count (2byte)  
each status information  
...

The parameter of total bytes are two byte binary codes that indicate the byte counter from next data to the last data by the little endian

The structure of each information field is as shown.

Item	Byte	explanation
Header	1	Header No.
Parameter count	1	Parameter byte counter
Parameter	n	Parameter value

The Header is one binary code that is shown on the list on next page.

The parameter count is one binary code that indicates the parameter byte counter of each field.

The parameters are binary codes that indicate the information of each field.

The structure of the Ink cartridge information field is as shown.

Item	Byte	explanation
Header	1	Header No.
Parameter count	1	Parameter byte counter
Parameter count of each color	1	Parameter byte counter of each color
Parameter	n	Parameter value

The parameter count of each color is one binary code that indicates the parameter byte counter of each color.

## 7.1 Status code

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	01
Parameter counter	1	01
Parameter	1	<Status code>

The parameter <Status code> is one byte Binary code that indicates status code as follows.

Status	Status code
In the error state	00
In the busy state	02
In the waiting state	03
In the idle state	04
In the cleaning state	07
In the factory shipment state	08
In the shutdown state	0A

## 7.2 Error code

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	02
Parameter counter	1	01
Parameter	1	<Error code>

The parameter <Error code> is one byte Binary code that indicates error code as follows.

Error	Error code
Fatal error	00
Other I/F is selected	01
Paper jam	04
Ink out	05
Paper out	06
Ink overflow error	10
Double Feed Error	12
CDR tray out error	29
Card loading Error	2A
Scanner unit open error (Cover open Error)	37
CDR guide open error	38

### 7.3 Warning code

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	04
Parameter counter	1	Warning kinds
Parameter	n	Occurred all warning code

The parameter <warning code> is one-byte Binary and indicates the warning code as follows, <warning code> is consisted of the several fields as shown below.

When several warning appears at the same time, reply all the warning codes with the format below.

value [value value .....].

<warning code> field is recognized in the following warning state. (This field is not recognized in @BDC-ST character string when no warning is received)

For ink low warning, the order depends on the ink cartridge order.

The parameter is as follows.

Warning	Warning code
Ink low (Cyan)	10
Ink low (Magenta)	11
Ink low (Light Magenta)	12
Ink low (Light Cyan)	13
Ink low (Black)	14
Ink low (Yellow)	15
Cleaning disable (Cyan)	51
Cleaning disable (Magenta)	52
Cleaning disable (Light Magenta)	53
Cleaning disable (Light Cyan)	54
Cleaning disable (Black)	55
Cleaning disable (Yellow)	56
Ink low2 (Cyan)	71
Ink low2 (Magenta)	72
Ink low2 (Light Magenta)	73
Ink low2 (Light Cyan)	74
Ink low2 (Black)	75
Ink low2 (Yellow)	76
Maintenance request will be occurred as soon	20

Note:

Ink low warning (10H-15H) occurs when the ink quantity is less than defined amount.

If the ink quantity is less than the one that can execute head cleaning, cleaning disable warning (51H-56H) occurs with the ink low warning (10H-15H) together.

Ink low2 warning (71H-76H) occurs when the ink quantity is less than defined ink low amount, and only either Ink low or ink low 2 is displayed.

If the ink quantity is less than the one that can execute head cleaning, cleaning disable warning (51H-56H) occurs with the ink low warning (71H-76H) together.

## 7.4 Paper path

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	06
Parameter counter	1	02
Parameter	2	paper path information

The parameter <paper path> is two bytes Binary code that indicate current paper path.  
Following information is replied.

Paper Path	code
Cut sheet (Rear)	01FF
CD-R	0201

## 7.5 Cleaning time information

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	0C
Parameter counter	1	02
Parameter	2	Cleaning time information

The parameter <cleaning time information> is two bytes Binary codes that indicate cleaning time or ink filling time.  
The unit is second. (This time is total time not passage time or remains time.)  
This parameter is added only when status code ST = 07H.

## 7.6 Ink information

Structure

Item	Byte(Hex)	Value(Hex)
Header	1	0F
Parameter total counter	1	19
Parameter counter for 1 I/C	1	4
Parameter	4 per 1 I/C	Ink information

The ink information order is Black, Cyan, light Cyan, Magenta, light Magenta, Yellow.  
Each ink cartridge information is consisted of m1, m2, m3, m4.

Ink information	code
m1	Ink cartridge name 01h: "Black Ink Cartridge" 03h: "Cyan Ink Cartridge" 04h: "Magenta Ink Cartridge" 05h: "Yellow Ink Cartridge" 06h: "Light Cyan Ink Cartridge" 07h: "Light Magenta Ink Cartridge"
m2	Ink color 00H:Black 01H:Cyan 02H:Magenta 03H:Yellow 04H:Light Cyan 05H:Light Magenta
m3	Ink remain counter:00H-64H no cartridge : "n" cartridge in : "i"
m4	Ink capacity :01H-04H no cartridge : "n" cartridge in : "i"

The parameter "m4" is one byte Binary code that indicates the capacity of the cartridge.

## 7.7 Loading path information

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	10h
Parameter counter	1	6
Parameter	6	010C4E084E4E

(“010C4E” : ASF / “084E4E” : CD-R)

## 7.8 Cancel code

Structure

Item	Byte(Hex)	Value(Hex)
Header	1	13h
Parameter counter	1	01
Parameter	1	Cancel request

The parameter < cancel code > is one byte Binary code that indicates the cancel request.

Cancel request	Code
No request	01
The status during received cancel command and initialize the printer	A1
Request	81

## 7.9 Job name Information

Structure

Item	Byte (Hex)	Value (Hex)
Header	1	19h
Parameter counter	1	n (Max 37)
Parameter	Max 37	Job name information

The parameter <Job name information> is n bytes Binary codes.

It indicates the m1 to m5 parameter and Job name specified by JH command.

If the JH command is not send of printing job, it replies “unknown”.

Item	Byte (Hex)	Value (Hex)
Header	1	19h
Parameter counter	1	0Ch
Parameter	0Ch	000000000 “unknown”

## CHAPTER 8: Device ID

This printer can send its device ID when it is requested.

<Artisan 50/Epson Stylus Photo P50/T50/T60 series/EP-302>

When IEEE1284.4 is enabled,

```
@EJL<SP>ID<CR><LF>
MFG:EPSON;
CMD:ESCPL2,BDC,D4,D4PX;
MDL:L800;
CLS:PRINTER;
DES:EPSON<SP> L800;
CID:EpsonStd2;
```

When IEEE1284.4 is disabled,

```
@EJL<SP>ID<CR><LF>
MFG:EPSON;
CMD:ESCPL2,BDC;
MDL: L800;
CLS:PRINTER;
DES:EPSON<SP> L800;
CID:EpsonStd2;
```